



C3 Pro テンキーレス メカニカルキーボード

内容物：

Keychron C3 Pro テンキーレス メカニカルキーボード x 1

Type-Cケーブル x 1

キーキャッププラー x 1

交換用キーキャップセット(Windows) x 1

ユーザーマニュアル x 1

クイックスタートガイド x 1

クイックスタートガイド

1 適切なシステムに切り替える

キーボードをコンピューターのOSと同じシステムに切り替えてください。

fn + capsキーで
Mac/Winを切り替える



2 VIAキーリマップ・ソフトウェア

usevia.appにアクセスするとオンラインでVIAソフトウェアを使用してキーのリマップを行います。万が一、VIAソフトウェアがキーボードを認識しない場合、弊社サポートまでお問い合わせください。



*オンラインのVIAソフトウェアは最新のChrome、Edge、Operaブラウザで動作します。


* VIAは有線接続している場合のみ動作します。

3 レイヤー

このキーボードのキー設定には4つのレイヤーがあります。
レイヤー0と1はMac用です。
レイヤー2と3はWindows用となります。

キーボードがMacに切り替わっている場合、レイヤー0が有効になります。

キーボードがWindowsに切り替わっている場合、レイヤー2が有効になります。
Windowsモードで使用している場合は、一番上のレイヤー（レイヤー0）ではなく、レイヤー2に変更を加えてください。これはよくある間違いの一つです。



4 バックライト

fn + Qを押してライトの効果を変更します。



fn + tabを押してバックライトのON/OFFを変更します。



5 バックライトの明るさを調整

fn + Wを押してバックライトを明るくします。



fn + W

fn + Sを押してバックライトを暗くします。



fn + S

6 Siri / Cortanaを有効にする

MacのSiriの場合：システム設定 > Siri > キーボード
ショートカットのオプションを選択します。

*SiriキーはmacOSでのみ動作し、iOSでは動作しません。



Settings



Siri



WindowsのCortanaの場合：スタート→「設定」→「Cortana」を
選択し、Windowsキー+Cキーでショートカットを選択します。

*Windows CortanaはWindows 10以上のOSでのみ利用可能
です。Cortanaは 特定の国/地域でのみ利用可能であり、どこで
も動作するとは限りません。



WIN + C

7 キーロールオーバー

fn + Nキーで6キーロールオーバー/Nキーロールオーバーの切替




6キーロールオーバー: キーボードは最大6つの同時キー入力を検出できます。

Nキーロールオーバー: キーボードはキーを押す回数に制限なく、すべてのキー入力を検出できます。

* キーボードはデフォルトでNキーロールオーバーをオンになります。

8 ファクトリリセット

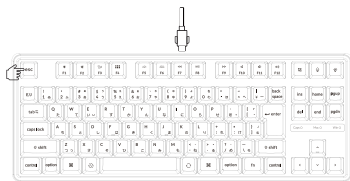


トラブルシューティング? キーボードに何が起きているか不明である場合、以下をお試しください。

- ① 電源ケーブルを差し込み、fn + J + Zを4秒間長押しすることでキーボードをファクトリリセットします。
 - ② Keychronウェブサイト (<https://www.keychron.com/>) より適切なファームウェア及びQMK Toolboxをダウンロードしてください。
 - ③ 電源ケーブルを抜いて、ESCキー* を押したまま、電源ケーブルもう一度差し込んでください。
 - ④ ESCキーを離すと、キーボードがDFUモードになります。
QMK Toolboxでファームウェアを更新してください。
 - ⑤ fn + J + Z (4秒間) を押して、キーボードを再度ファクトリリセットします。
- * または、スペースバーのキーキャップの下にあるリセットボタンを押し続けて下さい。

C3 Pro テンキーレス メカニカルキーボード仕様

仕様	
レイアウト	TKL
スイッチタイプ	メカニカル
幅	137.8 mm
長さ	364.6 mm
前面高さ	20.6 mm (キーキャップなし) 31.8mm (キーキャップ装着時)
背面高さ	29.9mm (キーキャップなし) 41.8mm (キーキャップ装着時)
キーボード 足の高さ	1.3 mm
角度	4度/6度/8.7度


C3 Pro テンキーレス メカニカルキーボード概要

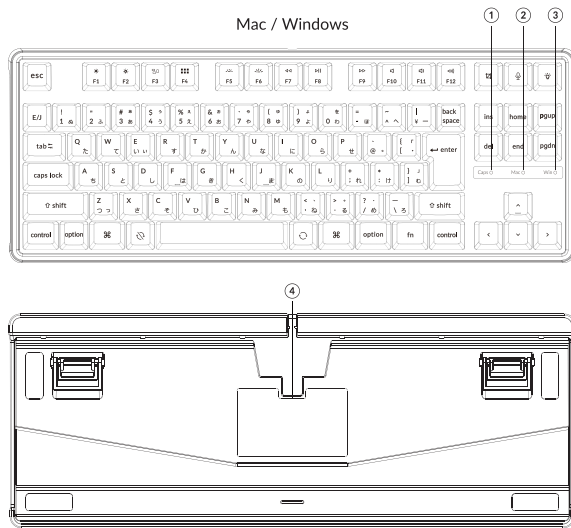


- ① Caps Lockインジケータ
- ② Macレイアウト
- ③ Windowsレイアウト
- ④ Type-C ポート

デフォルト・キーレイアウト：


LAYER 0：キーボードをMacに切り替えると、このレイヤーが有効になります。

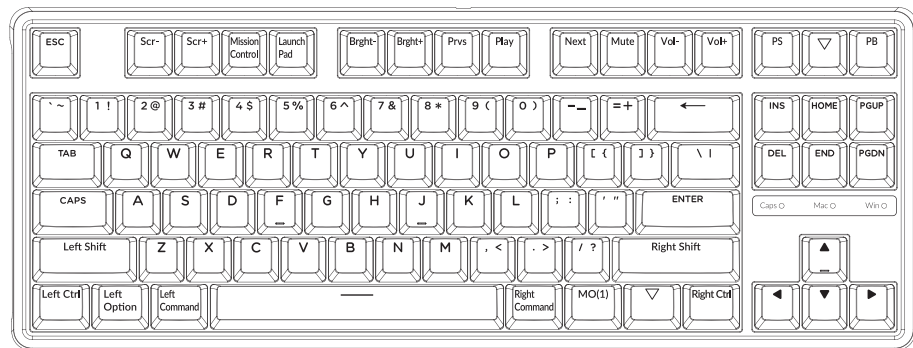

レイヤー1： キーボードをMacに切り替えてFN/MO(1)キーを押すと、このレイヤーが有効になります。

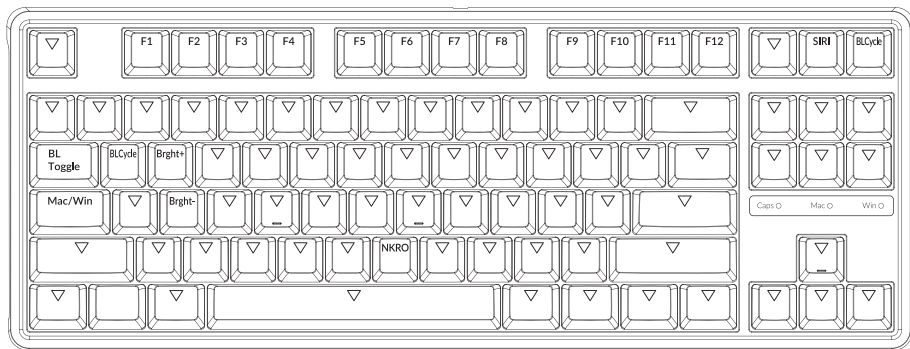


レイヤー2： キーボードがWindowsに切り替わると、このレイヤーが有効になります。

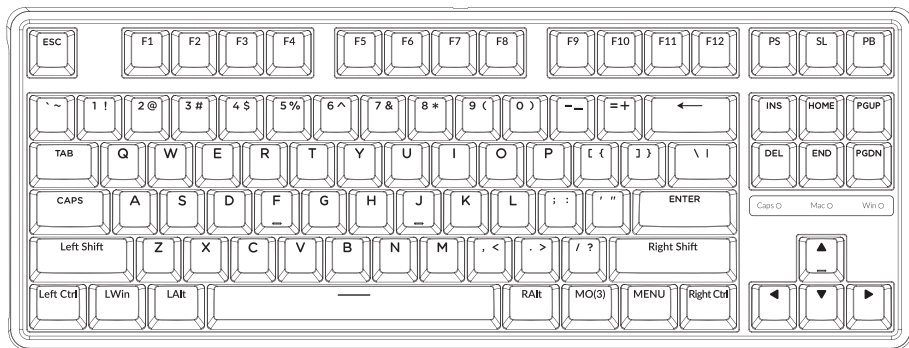

LWin=Left Windows LAlt=Left Alt RAlt=Right Alt

レイヤー3：このレイヤーは、キーボードをWindowsに切り替えてFN/MO(3)キーを押すと有効になります。

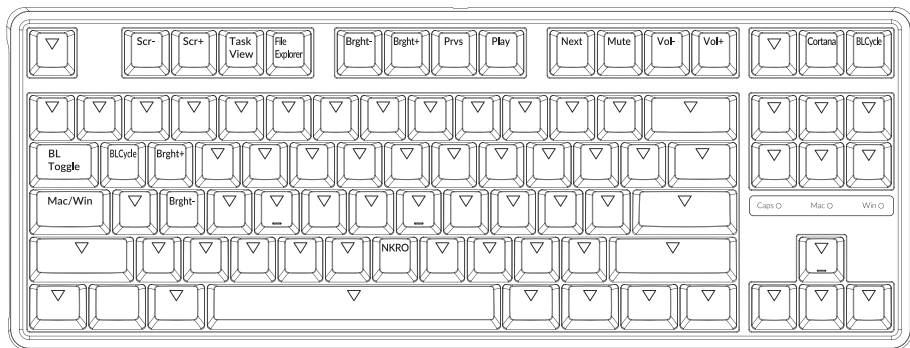

キー説明

キー説明		キー説明	
Scr-	画面の輝度低下	BL Toggle	バックライトのオン/オフ
Scr+	画面の輝度上昇	BL Cycle	バックライトの点灯サイクル
Bright-	バックライト低下	PS	プリントスクリーン/SysRq
Bright+	バックライト上昇	SL	スクロールロック
Prvs	戻る	PB	ポーズ/ブレイク
Play	再生/停止	mac/win	Mac/Windows スイッチ
Next	進む	MO(1)	このキーを押した場合、レイヤー1が有効になります。
Mute	ミュート	MO(2)	このキーを押した場合、レイヤー2が有効になります。
Vol-	音量低下	MO(3)	このキーを押した場合、レイヤー3が有効になります。
Vol+	音量上昇	MO(4)	このキーを押した場合、レイヤー4が有効になります。

サードパーティーの入力ツールと互換性がありません

Windows / Android OSの互換性、バージョン、ブランドにより、キーボードの使用中にサードパーティーの入力ツール機能が影響を受ける場合があります。システムとドライバが最新であることを確認してください。

特定のマルチメディアキーまたはファンクションキーが機能しない

ご使用のデバイスの互換性、バージョン、ブランド、ドライバにより機能しない場合があります。

*Multimedia keys: 

Function keys: 

安全上の注意:

事故を防ぐために、製品、付属品、および梱包部品を子供の手の届かない場所に保管してください。
腐食を避けるために、製品を乾燥した環境に保管してください。

キーボードとバッテリーの寿命を維持する為には、製品を-10度以下または50度以上の温度環境で使用、保管をしないでください。

Keychron, Inc.

Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

Support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China



C3 Pro Tenkeyless Mechanical Keyboard

IN THE BOX:

Keychron C3 Pro Tenkeyless Mechanical Keyboard x 1

Type-C Cable x 1

Keycap Puller x1

Extra Keycaps Set x 1

Manual x 1

Quick Start Guide x 1

QUICK START GUIDE

1 Switch To The Right System

Please switch the keyboard to the same system as your computer's operating system.

Press FN + CAPS to
Switch Mac / Win



FN + CAPS

2 The VIA Key Remapping Software


Please visit usevia.app to use the online VIA software to remap the keys.
If the VIA cannot recognize your keyboard, please reach our support to get the instruction.



- * The online VIA software can only run on the latest version of Chrome, Edge, and Opera browsers yet.
- * VIA only works when the keyboard is connected by wire to the computer.

3 The Layers

There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.



If your keyboard is switched to Mac, then layer 0 will be activated.



If your keyboard is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.




4 The Backlight

Press FN + Q to change the lighting effect



Press FN + TAB to turn the backlight on/off

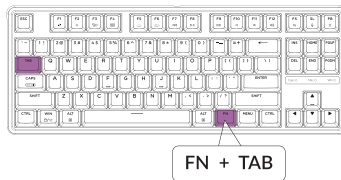

5 Adjust The Backlight Brightness

Press FN + W to increase the backlight brightness



Press FN + S to decrease the backlight brightness



6 Activate Siri / Cortana

For Siri on Mac: Go to System preferences > Siri > select "Hold Command Space" option.

*Siri key only works on macOS and does not work on iOS.




For Cortana on Windows: Select Start > Settings > Cortana and select the shortcut by pressing Windows key + C key.

*Windows Cortana is only available for Windows 10 and above OS. Cortana is only available in certain countries / regions and might not work everywhere.



7 The Key Rollover

Press FN + N to switch 6-key rollover/N-key rollover

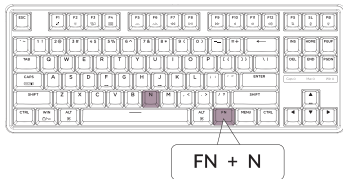


6-key rollover: the keyboard can detect up to 6 simultaneous key inputs.

N-key rollover: the keyboard can detect all key inputs without limit to the number of key presses.

* The keyboard turns on the N-key rollover by default.

8 Factory Reset

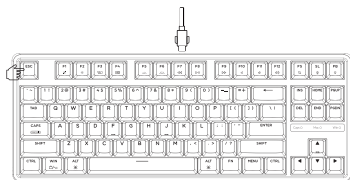

Troubleshooting? Don't know what's going on with the keyboard?


- ① Plug in the power cable and factory reset the keyboard by pressing fn + J + Z (for 4 seconds).
- ② Download the right firmware and QMK Toolbox from our website.
- ③ Unplug the power cable. Hold the ESC key* first and then plug the cable in again.
- ④ Release the ESC key, and the keyboard will now enter DFU mode. Please flash the firmware with QMK Toolbox.
- ⑤ Factory reset the keyboard again by pressing fn + J + Z (for 4 seconds).

* Or hold the reset button under the space bar keycap.

C3 PRO TENKEYLESS MECHANICAL KEYBOARD SPECIFICATIONS


Specifications	
Layout	TKL
Switch type	Mechanical
Width	137.8 mm
Length	364.6 mm
Front height	20.6 mm (without keycaps) 31.8 mm (with keycaps installed)
Back height	29.9 mm (without keycaps) 41.8 mm (with keycaps installed)
Keyboard feet height	1.3 mm
Angle	4 / 6 / 8.7 degree

C3 PRO TENKEYLESS MECHANICAL KEYBOARD OVERVIEW

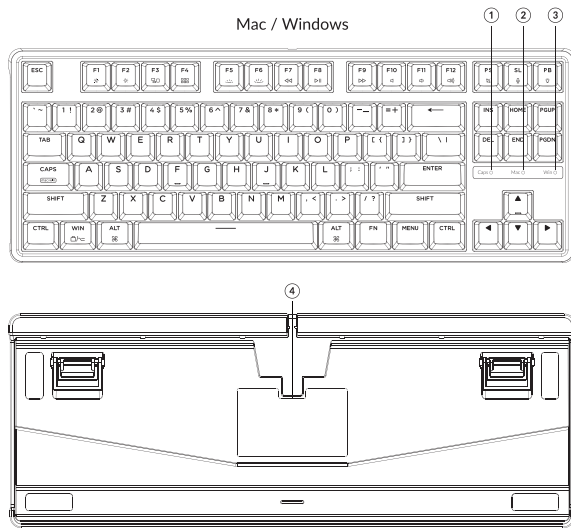


DEFAULT KEY LAYOUT:

LAYER 0: This layer will be activated when your keyboard is switched to Mac.

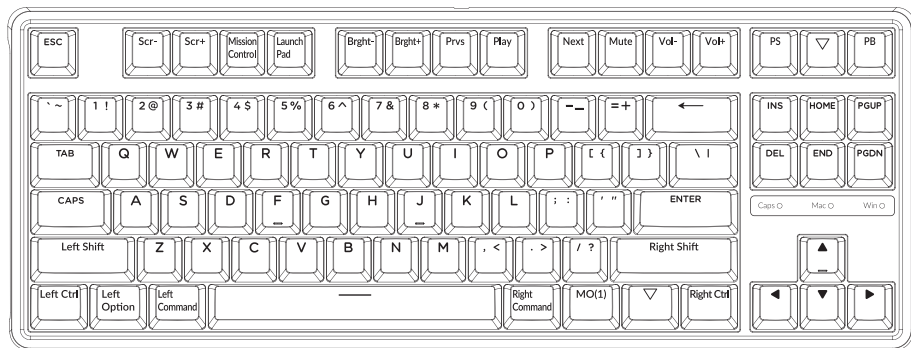


LAYER 2: This layer will be activated when your keyboard is switched to Windows.

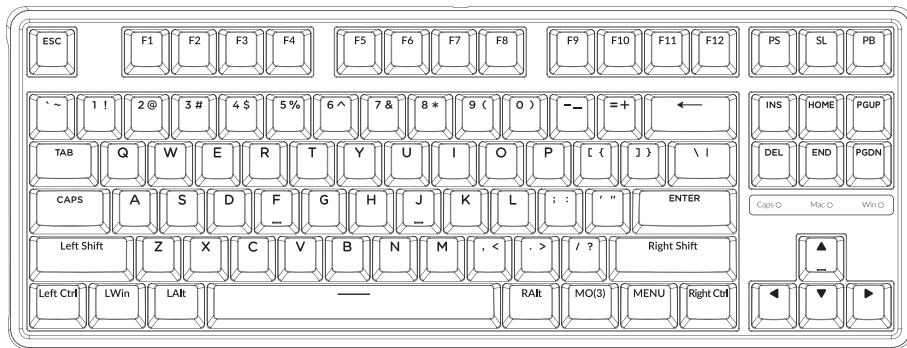

LWin=Left Windows LAlt=Left Alt RAlt=Right Alt

LAYER 3: This layer will be activated when your keyboard is switched to Windows and press the FN/MO(3) key.

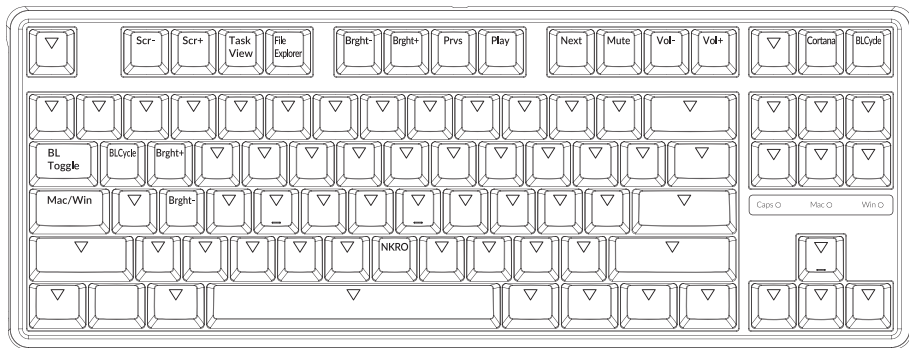

KEY DESCRIPTION

Key Description		Key Description	
Scr-	Screen Brightness Decrease	BL Toggle	Turn Backlight on/off
Scr+	Screen Brightness Increase	BL Cycle	Backlight Cycle
Bright-	Backlight Decrease	PS	Print Screen Sysrq
Bright+	Backlight Increase	SL	Scroll Lock
Prvs	Previous	PB	Pause Break
Play	Play/Pause	mac/win	Mac/Windows Switch
Next	Next	MO(1)	Layer 1 will be activated when holding this key
Mute	Mute	MO(2)	Layer 2 will be activated when holding this key
Vol-	Volume Decrease	MO(3)	Layer 3 will be activated when holding this key
Vol+	Volume Increase	MO(4)	Layer 4 will be activated when holding this key


Third-party input tools are not compatible with the keyboard.

Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain multimedia keys or function keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices.

*Multimedia keys: 

Function keys: 

Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C (14°F) or above 50°C (122°F) to preserve the lifespan of the keyboard and battery.

Keychron, Inc.

Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

Support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China

