



K7 Max ワイヤレス メカニカルキーボード

内容物：

Keychron K7 Max ワイヤレス メカニカルキーボード x 1

Type-Cケーブル x 1

ユーザーマニュアル x 1

クイックスタートガイド x 1

交換用キーキャップセット(Windows) x 1


Type-A to Type-Cアダプター x 1

Type-A 2.4GHzレシーバー x 1

クイックスタートガイド

Windows をお使いの方は、付属のWindows 用キーキャップと交換してお使いください。

Mac / Windows

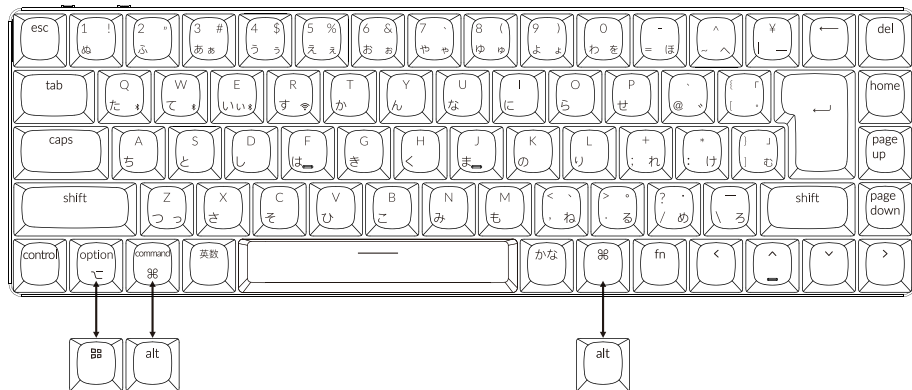


1 2.4GHzレシーバー接続



2.4GHzレシーバーを接続する
デバイスのUSBポートに接続
してください。



モード切替スイッチを2.4GHz
に切り替えてください。




G / Cable / BT
G = 2.4GHz




注: より良いワイヤレス体験のために、もしも2.4GHzレシーバーとK7 Maxとの距離がある場合はType-CケーブルとType-A to Type-Cアダプターを使用して2.4GHzレシーバーを接続して、テーブルのK7 Maxキーボードの近くに置くと、遅延率が低くかつ信号干渉が少なくなります。

2 Bluetooth接続

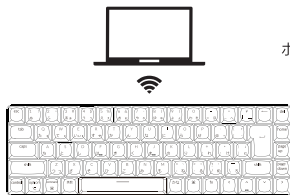

ボタンをBluetoothに切り替えてください。



G / Cable / BT

fnキー + Qを4秒間押してKeychron K7 Max
をデバイスとペアリングしてください。




3 ケーブル接続



4 適切なシステムに切り替える

左上のシステムとグルが、お使いのコンピュータのOSと同じシステムに切り替わっていることを確認してください。



5 VIAキーリマップ・ソフトウェア

usevia.appにアクセスするとオンラインでVIAソフトウェアを使用してキーのリマップを行います。
万が一、VIAソフトウェアがキーボードを認識しない場合、弊社サポートまでお問い合わせください。



*オンラインのVIAソフトウェアは最新のChrome、Edge、Operaブラウザで動作します。

*VIAは有線接続している場合のみ動作します。

6 レイヤー

このキーボードのキー設定には5つのレイヤーがあります。

レイヤー0はMac用

レイヤー1はWindows用

レイヤー2はMacマルチメディアキー用

レイヤー3はWindowsマルチメディアキー用

レイヤー4はファンクションキー用です。


システムトグルがMacに切り替わっていれば、レイヤー0が有効になります。

システムとグルがWinに切り替わっていれば、レイヤー1が有効になります。




7 バックライト

fn + Aを押してバックライトの効果を変更します。

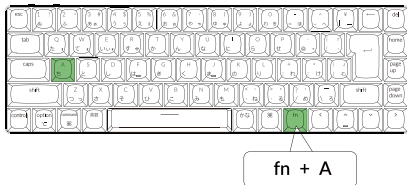


fn + caps lockを押してバックライトのON/OFFを変更します。

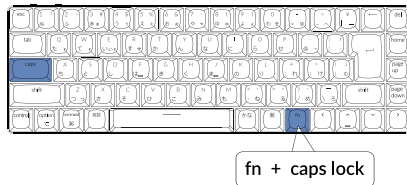


8 バックライトの明るさを調整

fn + Sを押してバックライトを明るくします。

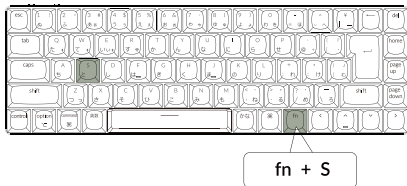

fn + Xを押してバックライトを暗くします。

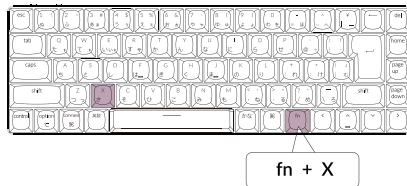

9 バックライトの速度を調整します

fn + Gを押してバックライト効果の速度を上昇



fn + G

fn + Bを押してバックライト効果の速度を低下




fn + B

10 保証について

本キーボードはカスタマイズ性が高く、リビルドも容易です。
保証期間中にキーボードの部品に不具合が生じた場合、
キーボード全体ではなく、不具合のある部品のみを交換する
ご対応となります。



11 ファクトリーリセット

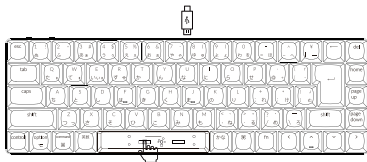

トラブルシューティング? キーボードに何が起きているか不明である場合、以下をお試しください。

- ① Keychronウェブサイト (<https://www.keychron.com/>) より適切なファームウェア及びQMK Toolboxをダウンロードしてください。
- ② 電源ケーブルを抜いてキーボードのスイッチを「Cable」モードに切り替えてください。
- ③ スペースバーのキーキャップを外してPCBボードにあるリセットボタンを確認してください。
- ④ まずリセットボタンを押した状態で、電源ケーブルをK7 Maxキーボードに接続してください。2秒後リセットボタンを離すとK7 MaxはDFUモードに入ります。
- ⑤ QMK Toolboxでファームウェアを書き直します。
- ⑥ 「fn」 + 「J」 + 「Z」を約4秒間同時に長押ししてファクトリーリセットをお試しください。

K7 Max ワイヤレス メカニカルキーボード仕様

トータルキー数: 68キー(US)、71キー(日本語)

スイッチ: メカニカル

バッテリー: 1550mAh

充電時間: 約 3 時間

充電ポート: USB Type-C

モード: Bluetooth / Wired / 2.4GHz




Bluetooth 有効距離: 最大 10 メートル(オープンスペース)

Bluetooth デバイス名: Keychron K7 Max

LEDステータス概要

機能	LED	ステータス
充電	電源インジケータ	バッテリー低 - 赤く点滅 充電中 - 赤く点灯 フル充電 - 緑に点灯
Bluetooth	Bluetooth インジケータ	切替 - ゆっくり点滅 ペアリング済 - 消灯 ペアリング - 速く点滅
2.4G	2.4Gインジケータ	再接続 - 素早く点滅 ペアリング完了 - 消灯 ペアリング中 - ゆっくりと点滅


K7 Max ワイヤレス メカニカルキーボード概要

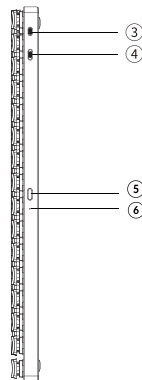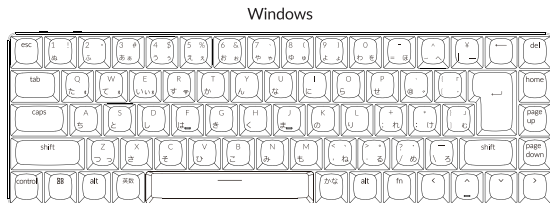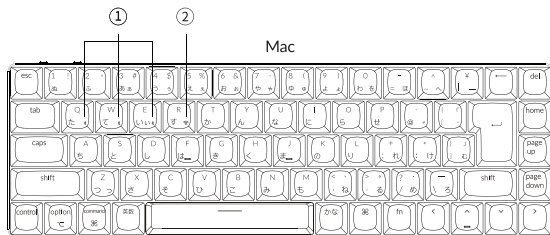


- ① Bluetoothインジケータ
- ② 2.4Gインジケータ
- ③ Win/Android Mac/iOS(OS切替スイッチ)
- ④ 2.4G / Cable / BT(モード切替スイッチ)
- ⑤ Caps Lokインジケータ
- ⑥ 電源インジケータ

デフォルト・キーレイアウト:

レイヤー0: キーボードのシステムトグルがMacの場合に有効になります。

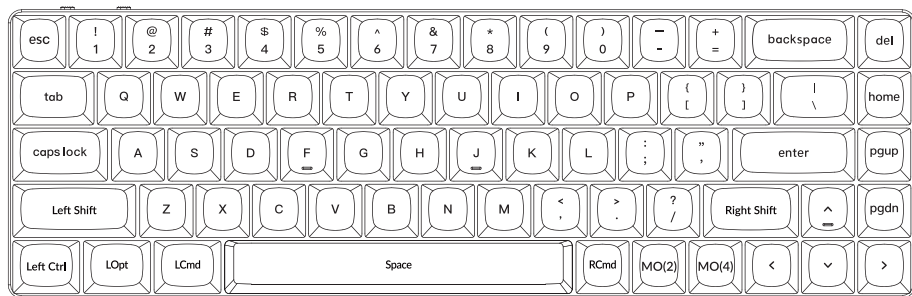


レイヤー1:キーボードのシステムトグルがWINDOWSの場合に有効になります。

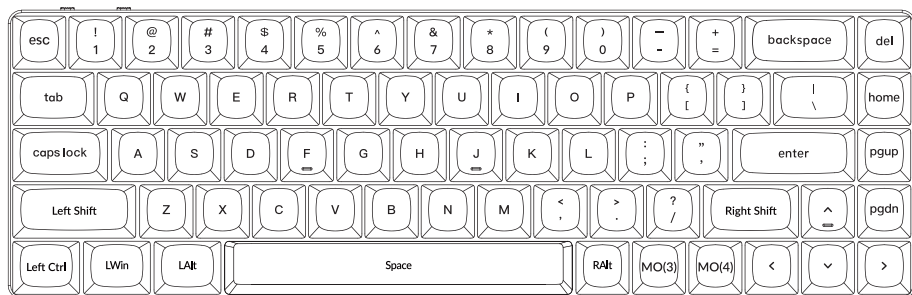


LWin = Left Windows LAlt = Left Alt RAlt = Right Alt


レイヤー2:キーボードのシステムトグルがMACで、fn/MO(2)キーを押した場合に有効になります。

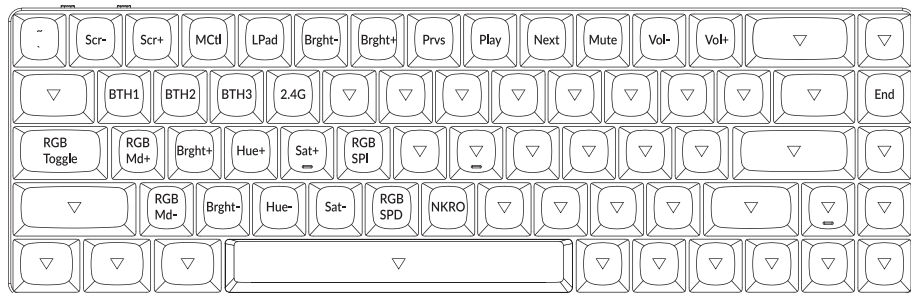

レイヤー3:キーボードのシステムトグルがWindowsで、fn/MO(3)キーを押した場合に有効になります。

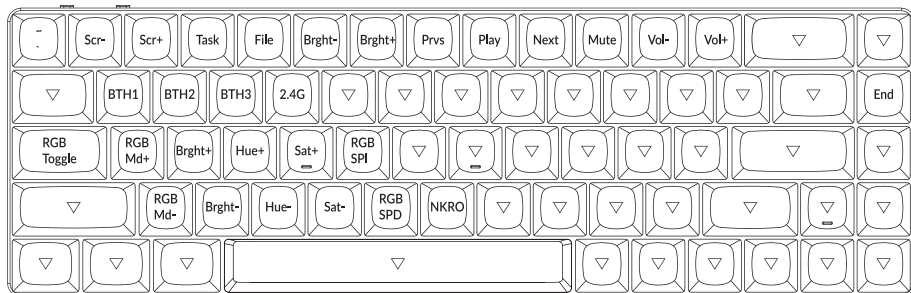

レイヤー4:fn/MO(4)キーを押した場合に有効になります。

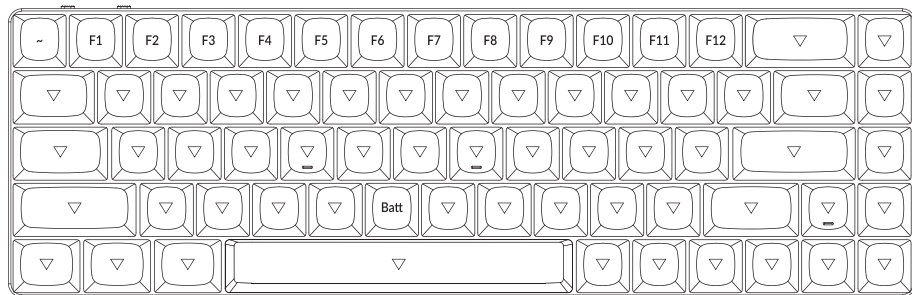

キー説明

キー説明	
Scr-	画面の輝度低下
Scr+	画面の輝度上昇
Bright-	バックライト低下
Bright+	バックライト上昇
Prvs	戻る
Play	再生/停止
Next	進む
Mute	ミュート
Vol-	音量低下
Vol+	音量上昇
RGB Toggle	バックライトON/OFF
RGBMd+	RGBモード進む

キー説明	
RGBMd-	RGBモード戻る
Hue+	色相上昇
Hue-	色相低下
RGB SPI	RGB速度上昇
RGB SPD	RGB速度低下
MO(1)	このキーを押した場合、レイヤー1が有効になります。
MO(2)	このキーを押した場合、レイヤー2が有効になります。
MO(3)	このキーを押した場合、レイヤー3が有効になります。
MO(4)	このキーを押した場合、レイヤー4が有効になります。
BTH1	Bluetoothホスト1
BTH2	Bluetoothホスト2
BTH3	Bluetoothホスト3

キー説明	
Sat+	彩度上昇
Sat-	彩度減少
2.4G	2.4GHzホスト
Batt	バッテリー残量
NKRO	Nキーロールオーバー

機能説明:

充電

USBケーブルをポートに差し込み、もう一方をキーボードポートに差し込みます。
充電中は充電インジケーターが赤く点灯、約3時間で完全充電されると、充電インジケーターが緑色に表示されます。

*K7 Maxは全てのUSBポートと互換性があります。最高のパフォーマンスを得るには5V/1Aのアダプター、あるいはUSB3.0を使用してください。BluetoothのモードがON/OFFでも充電できます。

**この製品は、最大5Vの充電電圧と1Aの充電電流に対応しております。不適切な充電によって引き起こされた問題について一切の責任を負いません。

2.4GHZ / CABLE / BLUETOOTH MODE(モード切替スイッチ)

2.4GHZモード

1. 2.4GHzレシーバーを接続するデバイスのUSBポートに接続してください。
2. モード切替スイッチを2.4GHzに切替えてください。本キーボードは自動的にご使用のデバイスと接続します。

*「fn」+「R」を同時に長押しして強制ペアリングモードに入ります。強制ペアリングモードではキーボードをレシーバーから20cm以内に置くことをおすすめします。

BLUETOOTHモード

1. 切り替えボタンをBluetoothに切り替えてください。
2. バックライトが点灯します。
3. 「fn」+「Q」キーを4秒間押ししてBluetoothペアリングをアクティブにします (ペアリングを検出するためにBluetoothインジケーターが3分程高速点滅します)。

4. お使いのデバイスでBluetoothデバイス「Keychron K7 Maxを検索し、接続します（ペアリングに成功するとBluetoothインジケータが消えます）。

注意:このキーボードは組み合わせキー「fn +Q / fn +W / fn + E」で最大3台のデバイスのペアリング登録ができます。

*Bluetoothインジケータは3分間点滅します。

**Bluetoothのバージョンが異なるため、接続速度が遅い或いは失敗する可能性があります。すべての設定が正しく完了された事を確認してください。

BLUETOOTHデバイスの切り替え

「fn +Q / fn +W / fn + E」を短く押して、デバイスを切り替えます。

再接続:

1. キーボードをBluetoothの位置に切り替えてキーボードをアクティブにして下さい。（デフォルトではK7 Maxは最後に接続したデバイスに接続します）

2. Bluetoothインジケータが3秒間点滅し、最後に接続したデバイスに接続します。

3. Bluetoothインジケータが消灯の場合、任意のボタンを押して、再度接続を行ってください。

*この機能を実行するには、K7 Maxが既にデバイスとペアリングされている必要があります。

有線モード

1. モード切替スイッチを「Cable」に切り替えてください（USBケーブルが接続されていない場合は無反応になります）。

2. ケーブルをデバイスとキーボードに接続してください。

3. バックライトが点灯します。

*有線モードの場合、節電モードにはなりません。

キーボードの電源をOFFにする

「OFF」に切替えてください。

バックライトの設定

- バックライトのON/OFFの切替は「fn」+「caps lock」を同時に短く押します。
- バックライトの効果を変更する際は、「fn」+「A」もしくは「fn」+「Z」を同時に短く押します。

OS切り替え

1-MAC/iOS

Mac/iOSに接続されているときは、スイッチをMac / iOSに切り替えます。

2-WINDOWS/ANDROID

WindowsまたはAndroidに接続されているときは、スイッチをWindows / Androidに切り替えます。

WindowsまたはAndroidモードの際は、キーは「Windows」と「Alt」のファンクションキーとして使用されます。

トラブルシューティング

キーボードとデバイスがペアリングできない場合は、ペアリングしようとしているデバイスがBluetooth対応であることを確認してください。

対応の場合はデバイスを再起動し、もう一度キーボードとペアリングしてみてください。

注意:Windowsコンピューターでは、新しいBluetooth接続により、追加のソフトウェアを更新する場合があります。このプロセスは正常に完了したことを示すメッセージが表示された後も継続中な可能性があります。ペアリング後、少なくとも20分待って、すべてのアップデートが完了したことを確認してからコンピューターを再起動してください。

デバイスがBluetooth接続 (Windows) に対応し、外部キーボード (HIDプロファイル) をサポートしていることを確認してください。

Bluetoothデバイス>設定を開き、以下を選択します。
Bluetoothデバイスがコンピューターを検出できるようにする。
Bluetoothデバイスがこのコンピューターに接続できるようにします。
Bluetoothデバイスが接続を要求したときに通知する。

キーボードがBluetoothモードで動作しない。

お使いのコンピューター / スマートフォン:
Bluetooth設定 > キーボードを選択して「接続解除」もしくは「このデバイスの登録を解除」を行ってください。

デバイスを再起動し、最初からBluetooth接続を行ってください。
お使いのキーボード:
キーボードの電源をOFFにしてから再びONにして、デバイスと再度接続してください。

Bluetooth接続が10メートル以内でも中断されます

キーボードがBluetooth信号を妨害する可能性のある金属付近に置かれているかどうかを確認してください。

サードパーティーの入力ツールと互換性がありません

Windows / Android OSの互換性、バージョン、ブランドにより、キーボードの使用中にサードパーティーの入力ツール機能が影響を受ける場合があります。システムとドライバが最新であることを確認してください。

特定のマルチメディアキーまたはファンクションキーが機能しない

ご使用のデバイスの互換性、バージョン、ブランド、ドライバにより機能しない場合があります。

*Multimedia keys: 

Function keys: 

安全上の注意:

事故を防ぐために、製品、付属品、および梱包部品を子供の手の届かない場所に保管してください。
腐食を避けるために、製品を乾燥した環境に保管してください。

キーボードとバッテリーの寿命を維持する為には、製品を-10度以下または50度以上の温度環境で使用、保管をしないでください。

Keychron, Inc.
Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

Support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China



K7 Max Wireless Mechanical Keyboard

IN THE BOX:

Keychron K7 Max Wireless Mechanical Keyboard x 1

Type-C Cable x 1

Manual x 1

Quick Start Guide x 1

Extra Keycaps Set x 1


Type-A to Type-C Adapter x 1

Type-A 2.4GHz Receiver x 1

QUICK START GUIDE


If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

Mac / Windows

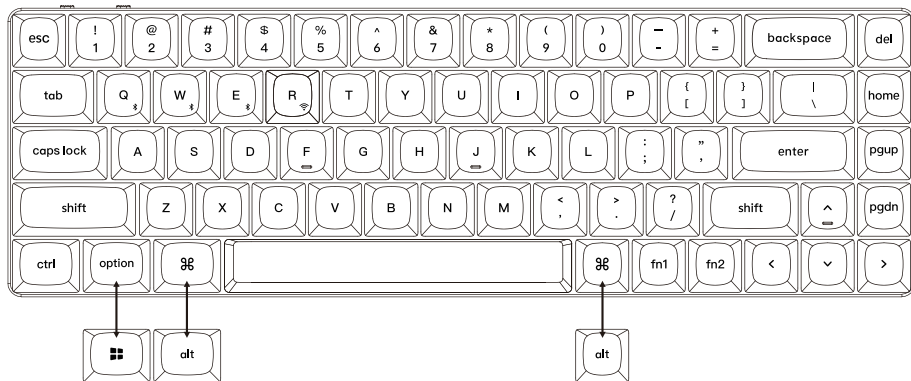


1 Connect 2.4GHz Receiver

Connect the 2.4GHz receiver to the device USB port.





Switch toggle to 2.4GHz mode



G / Cable / BT

G = 2.4GHz




Note: For the best wireless experience, we recommend using the extension adapter for receiver and putting the 2.4GHz receiver somewhere on your desk close to your keyboard for a low rate of latency and fewer signal interferences.

2 Connect Bluetooth




Switch toggle to Bluetooth



G / Cable / BT

Press fn1 + Q (for 4 seconds) and pair with device named Keychron K7 Max.




fn1 + Q

3 Connect Cable



4 Switch To The Right System

Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.



5 The VIA Key Remapping Software

Please visit usevia.app to use the online VIA software to remap the keys.
If the VIA cannot recognize your keyboard, please reach our support to get the instruction.




*The online VIA software can only run on the latest version of Chrome, Edge, and Opera browsers yet.

*VIA only works when the keyboard is connected by wire to the computer.

6 The Layers

There are five layers of key settings on the keyboard.
The layer 0 is for the Mac system.
The layer 1 is for the Windows system.
The layer 2 is for the Mac Multimedia keys.
The layer 3 is for the Windows Multimedia keys.
The layer 4 is for the Function keys.



If your system toggle is switched to Mac, then the layer 0 will be activated.



If your system toggle is switched to Windows, then the layer 1 will be activated.



7 The Backlight

Press fn1 + A to change the lighting effect



fn1 + A

Press fn1 + caps lock to turn the backlight on/off



fn1 + caps lock

8 Adjust The Backlight Brightness

Press fn1 + S to increase the backlight brightness



fn1 + S


Press fn1 + X to decrease the backlight brightness




fn1 + X

9 Adjust The Backlight Speed

Press fn1 + G to increase the light effect speed

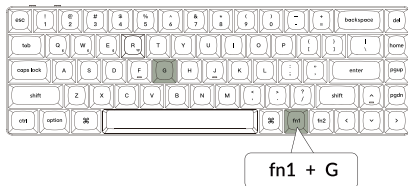

Press fn1 + B to decrease the light effect speed

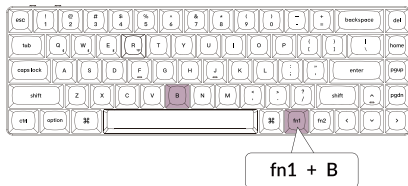


10 Warranty

The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.



11 Factory Reset

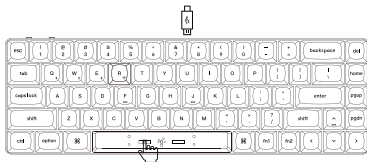

Troubleshooting? Don't know what's going on with the keyboard?

1. Download the right firmware and QMK Toolbox from our website.
 2. Unplug the power cable and switch the keyboard to Cable mode.
 3. Remove the space bar keycap to find the reset button on the PCB.
 4. Hold the reset key first, then plug the power cable into the keyboard.
Release the reset key after 2 seconds, and the keyboard will now enter DFU mode.
 5. Flash the firmware with the QMK Toolbox.
 6. Factory reset the keyboard by pressing fn2 + J + Z (for 4 seconds).
- *Step by step guide can be found on our website.

K7 MAX WIRELESS MECHANICAL KEYBOARD SPECIFICATIONS

Number of keys: 68

Switch type: Mechanical

Battery: 1550mAh

Charging time: Around 3 hours

Charging port: USB Type-C

Mode: Bluetooth / Wired / 2.4GHz




Bluetooth operating distance: Within 10 meters (open space)

Name of Bluetooth device: Keychron K7 Max

LED STATUS OVERVIEW

Function	LED Location	Status
Charging	Power Indicator	Low Power - Red Light Blinking Charging - Static Red Full charged - Static Green
Bluetooth	Bluetooth Indicator	Switching - Fast Blinking Paired - Light Off Pairing - Slow Blinking
2.4G	2.4G Indicator	Reconnecting-Fast Blinking Paired - Light Off Pairing - Slow Blinking


K7 MAX WIRELESS MECHANICAL KEYBOARD OVERVIEW

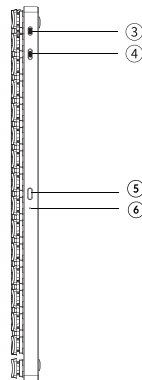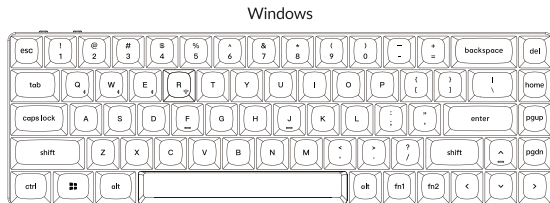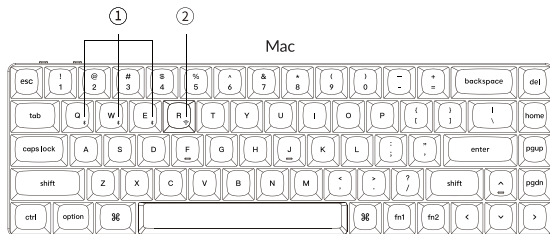


- ① Bluetooth Indicator
- ② 2.4G Indicator
- ③ Win/Android Mac/iOS (OS Toggle)
- ④ 2.4G / Cable / BT(Connection Mode Toggle)
- ⑤ Charging Port
- ⑥ Power Indicator

DEFAULT KEY LAYOUT:

LAYER 0: This layer will be activated when your keyboard's system toggle is switched to Mac.

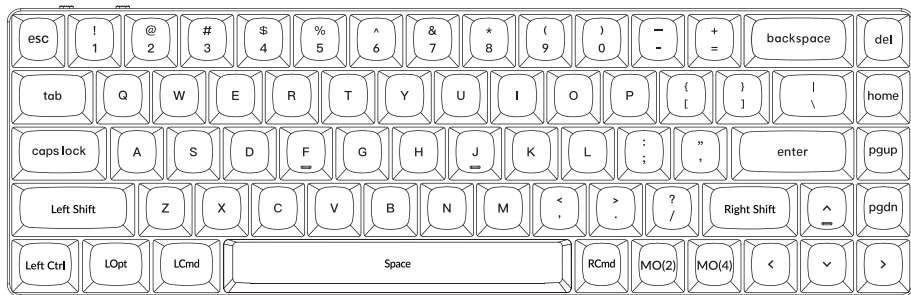


LAYER 1: This layer will be activated when your keyboard's system toggle is switched to Windows.

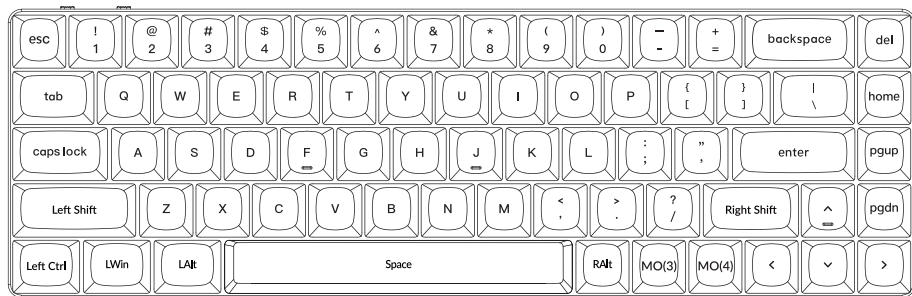


LWin = Left Windows LAlt = Left Alt RAlt = Right Alt


LAYER 2: This layer will be activated when your keyboard's system toggle is switched to Mac and press the fn1/MO(2) key.

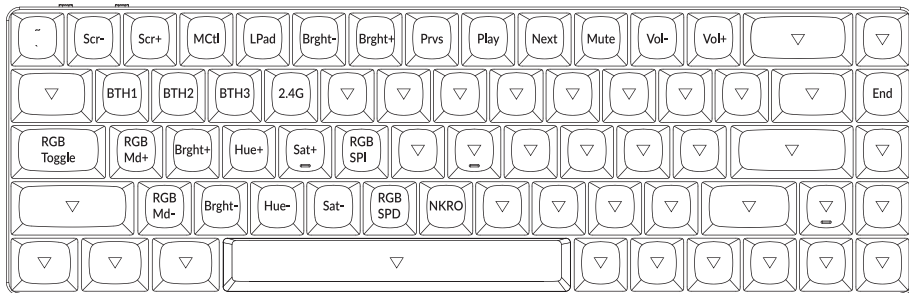

LAYER 3: This layer will be activated when your keyboard's system toggle is switched to Windows and press the fn1/MO(3) key.

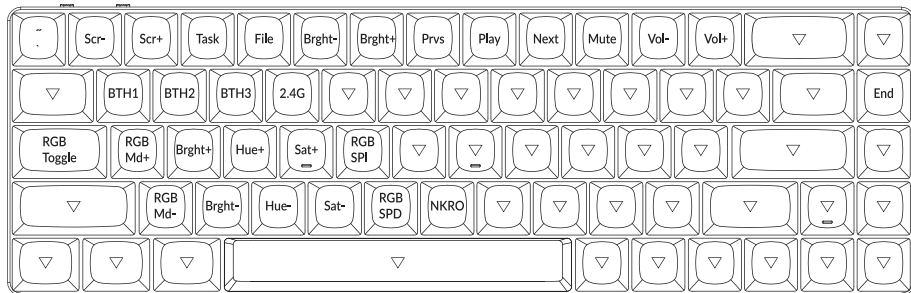

LAYER 4: This layer will be activated when you press the fn2/MO(4) key.

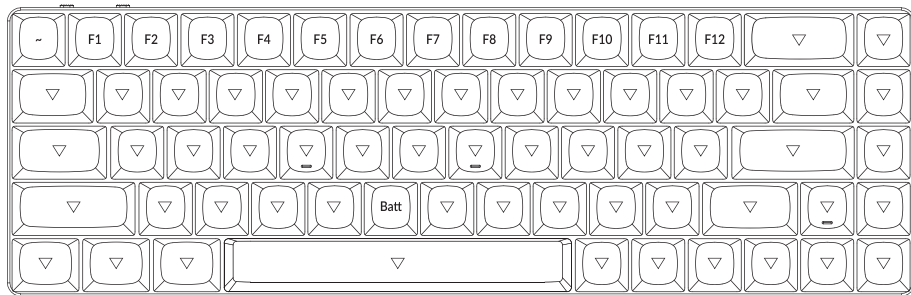

KEY DESCRIPTION

Key Description		Key Description		Key Description	
Scr-	Screen Brightness Decrease	RGBMd-	RGB Mode Previous	Sat+	Saturation Increase
Scr+	Screen Brightness Increase	Hue+	Hue Increase	Sat-	Saturation Decrease
Bright-	Backlight Decrease	Hue-	Hue Decrease	2.4G	2.4 GHz Host
Bright+	Backlight Increase	RGB SPI	RGB Speed Increase	Batt	Battery life
Prvs	Previous	RGB SPD	RGB Speed Decrease	NKRO	N-key rollover
Play	Play/Pause	MO(1)	Layer 1 will be activated when holding this key		
Next	Next	MO(2)	Layer 2 will be activated when holding this key		
Mute	Mute	MO(3)	Layer 3 will be activated when holding this key		
Vol-	Volume Decrease	MO(4)	Layer 4 will be activated when holding this key		
Vol+	Volume Increase	BTH1	Bluetooth Host 1		
RGB Toggle	Turn Backlight on/off	BTH2	Bluetooth Host 2		
RGBMd+	RGB Mode Next	BTH3	Bluetooth Host 3		

FUNCTION DESCRIPTION: CHARGING

Plug the cable into a USB port and plug the other end into the keyboard port. Power Indicator: A red light will stay on while charging; Fully charged in around 3 hours, a green battery indicator will appear.

*The K7 Max keyboard is compatible with all USB ports. Please use a 5V 1A adapter or USB 3.0 for the best performance. The K7 Max can be charged in Bluetooth/on/off mode.

**This product supports up to 5V charging voltage and 1A charging current. We are not responsible for any problems caused by improper charging.

2.4GHZ / CABLE / BLUETOOTH MODE (MODE TOGGLE SWITCH)

2.4GHZ MODE

1. Connect the 2.4GHz receiver to your device's USB Port.
2. Switch the toggle switch to the 2.4GHz option. The keyboard will automatically connect to your device.

*Press the key combination "fn1" + "R" to enter the forced pairing mode. During this period, it is recommended that the keyboard be within 20cm of the receiver.

BLUETOOTH MODE

1. Switch the toggle switch to the Bluetooth option.
2. Backlighting will be turned on.
3. Hold "fn1+Q" key for 4 seconds to activate Bluetooth pairing (the Bluetooth indicator fast flashes for 3 minutes to detect pairing).

4. Search for the Bluetooth device “Keychron K7 Max” on your device and connect it (the Bluetooth indicator goes off after successful pairing).

Note: This keyboard supports pairing up to 3 devices simultaneously via key combination “fn1” + “Q” / “fn1” + “W” / “fn1” + “E”.

**The Bluetooth indicator will continue to flash for 3 minutes.*

***Slow or failed connections may exist due to different Bluetooth versions, please make sure all the settings are correct.*

SWITCH BLUETOOTH DEVICES

Short press key combination “fn1” + “Q” / “fn1” + “W” / “fn1” + “E” to switch to other device.

RECONNECT:

1. Switch the keyboard to the Bluetooth option to activate the keyboard.
2. The Bluetooth indicator flashes for 3 seconds and automatically pairs with the last paired device.
3. If the Bluetooth indicator is off, press any button to enter the connection again.

**The keyboard must have been paired with the device to perform this function.*

WIRED MODE

1. Switch the toggle switch to the Cable option (it only works when a USB cable is plugged in).
2. Connect our cable with your PC and keyboard.
3. Backlighting will be turned on.

**Under Wired Mode, keyboard will not enter into Battery Saver Mode.*

TURN OFF THE KEYBOARD

Switch the keyboard to the Cable option and unplug the power cable.

BACKLIGHT SETTING

- Short press key combination “fn1” + “caps lock” to turn the backlight on/off.
- Short press key combination “fn1” + “A” / “fn1” + “Z” to switch between different types of lighting effects.

OS TOGGLE SWITCH

1 – MAC/iOS

Switch the toggle to Mac/iOS when the keyboard is connected to a Mac or iOS operating system.

2 – WINDOWS/ANDROID

Switch the toggle to Windows/Android when the keyboard is connected to a Windows or Android operating system.

**When using the Windows/Android mode,   keys are used for “Windows” and “Alt” functions.*

TROUBLESHOOTING

If unable to pair keyboard to device, confirm that the device you’re trying to pair with is Bluetooth-capable. If so, restart the device and try pairing it with the keyboard again.

Note: On a Windows computer, a new Bluetooth connection will sometimes require additional software updates—a process that may still be ongoing after a message appears indicating a successful completion. Wait at least 20 minutes after pairing to make sure all updates are completed before restarting the computer.

Confirm that the device is configured to accept Bluetooth connections (Windows) and supports an external keyboard (HID profile).

Go to Bluetooth Devices > Open Settings and select the following:

Allow Bluetooth devices to find this computer

Allow Bluetooth devices to connect to this computer

Alert me when a Bluetooth device wants to connect

My keyboard isn't working in Bluetooth mode.

For the computer/smartphone:

Go to your device Bluetooth settings>Select the keyboard and remove/delete/unpair it.

Then restart your device.

For the keyboard:

Turn the keyboard off and back on. Then reconnect it to your device.

Bluetooth connection is interrupted even within 10 meters.


Check if the keyboard is resting on a metal surface that can interfere with the Bluetooth signal.


Third-party input tools are not compatible with the keyboard.

Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain multimedia keys or function keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices.

*Multimedia keys: 

Function keys: 

Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C (5°F) or above 50°C (131°F) to preserve the lifespan of the keyboard and battery.

Keychron, Inc.
Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

Support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China

