



Q2 カスタマイズキーボード・ユーザーマニュアル

組み立て済みバージョン

キーボード

1x 完全に組み立てられたキーボード

以下を含む

1x アルミニウムケース

1x PCB

1x スチールプレート

1x 吸音材

1x ケースフォーム

12x ガスケット

(8台のボックスに設置され、4個)

4セットx スタビライザー

1セットx キーキャップ(PBT Double-shot)

1セットx スイッチ(Gateron G Pro)

ケーブル

1x Type-C to Type-Cケーブル

1x Type-A to Type-Cアダプター



工具

1x スイッチプラー

1x キーキャッププラー

1x ネジ回し

1x ヘックスキー

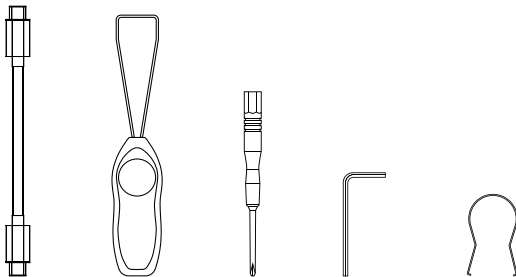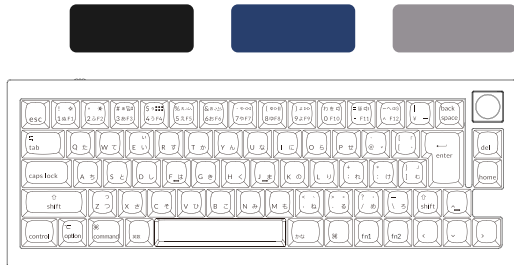

ベアボーン・バージョン

キーボードキット

1x キーボードキット(キーキャップ、スイッチなし)

以下を含む

1x アルミニウムケース

1x PCB

1x スチールプレート


1x 吸音材

1x ケースフォーム

12x ガスケット

(8台のボックスに設置され、4個)

4セットx スタビライザー

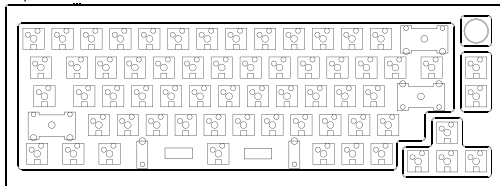

ケーブル

1x Type-C to Type-Cケーブル

1x Type-A to Type-Cアダプター


工具

1x スイッチプラー

1x キーキャッププラー

1x ネジ回し


1x ヘックスキー

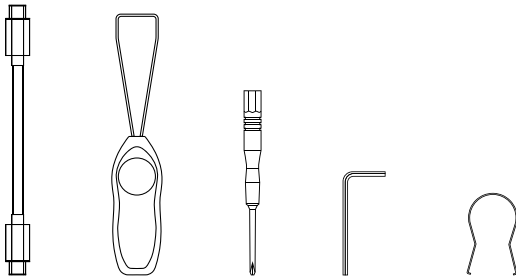

クイックスタートガイド


Windows をお使いの方は、付属のWindows 用キーキャップと交換してお使いください。

Mac / Windows

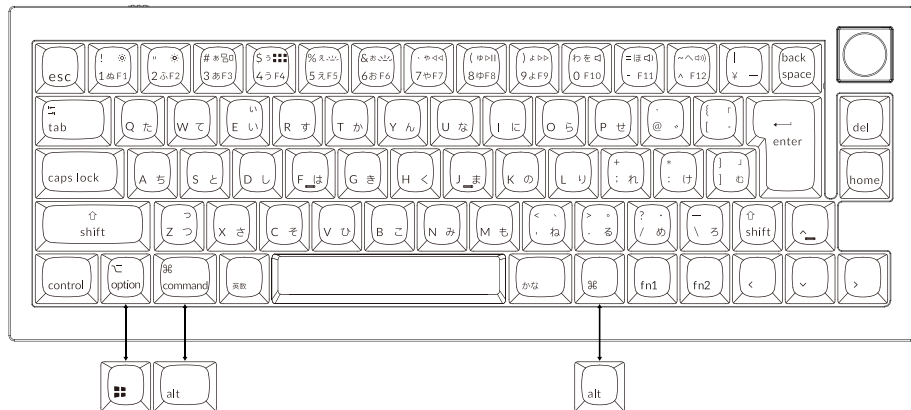

1 適切なシステムに切り替える

左上のシステムトグルが、
お使いのコンピューターのOSと
同じシステムに切り替わっている
ことを確認してください。



2 VIAキーリマップ・ソフトウェア

caniusevia.com にアクセスしてVIAソフトウェアを
ダウンロードして、キーのリマップを行います。
万が一、VIAソフトウェアがキーボードを認識しない
場合は、弊社サポートまでお問い合わせ下さい。



3 レイヤー

このキーボードのキー設定には5つの

レイヤーがあります。


レイヤー0はMac用です。

レイヤー1はWindows用です。

レイヤー2はMacマルチメディアキー用です。

レイヤー3はWindowsマルチメディアキー用です。

レイヤー4はファンクションキー用です。




システムトグルがMacに切り替わっていれば、

レイヤー0が有効になります。


システムトグルがWindowsに切り替わっ

ていれば、レイヤー1が有効になります。




4 マルチメディアキーとファンクションキー

Multimedia keys



Function keys



マルチメディアキーの機能のいずれかを使用する場合にはfn1と使いたい



キーと一緒に押して下さい。


ファンクションキーの機能のいずれかを使用する場合にはfn2と使いたい




キーと一緒に押して下さい。

5 バックライト

fn1 + Q を押してライトの効果を変更します。

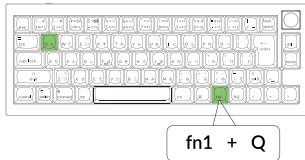


fn1 + tab を押してバックライトのON/OFFを変更します。

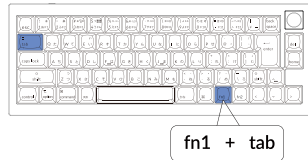


6 バックライトの明るさを調整

fn1 + W を押してバックライトを明るくします。

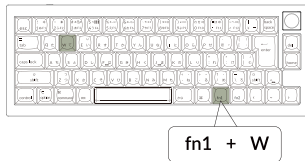

fn1 + S を押してバックライトを暗くします。

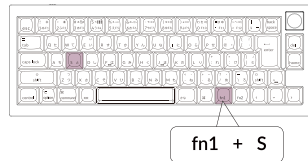

7 バックライトスピード調整

fn1 + T を一緒に押してライトのスピードを速くします。



fn1 + T

fn1 + G を一緒に押してライトのスピードを遅くします。



fn1 + G

8 保証について

本キーボードはカスタマイズ性が高く、リビルドも容易です。
保証期間中にキーボードの部品に不具合が生じた場合、
キーボード全体ではなく、不具合のある部品のみを交換する
ご対応となります。



9 ウェブサイトで組み立てのチュートリアルを見る

もしキーボードの組み立てがはじめてであれば、keychronのウェブサイトにあるチュートリアルを見ることをおすすめ致します。その後にご自身で組み立てて下さい。



10 ファクトリーリセット



問題ですか？キーボードに不調がある場合は以下を試してみてください。


- ① fn1 + J + Z (4秒)を長押ししてファクトリーリセットしてみてください。
- ② 弊社ウェブサイトからファームウェアの更新がある場合は、適切なものをインストールする。キーボードから電源ケーブルを外してみる。
- ③ スペースバーのキーキャップを外し、PCB上のリセットボタンからケーブルモードにしてみてください。
- ④ 電源ケーブルを挿入しリセットキーをホールドし、その後離してください。これでキーボードはDFUモードに入りました。
- ⑤ QMK Toolboxを使用しファームウェアを更新します。
- ⑥ fn1 + J + Z (4秒)を再度長押ししてファクトリーリセットをします。

Q2カスタマイズキーボード仕様



仕様	
レイアウト	65%
スイッチタイプ	メカニカル
幅	121mm
長さ	327.5mm
正面高さ	20mm(キーキャップ含まず)
背面高さt	33.8mm(キーキャップ含まず)
正面高さt	33.6mm(OSAキーキャップ)
背面高さ	45.6mm(OSAキーキャップ)
テンキー脚高さ	2.4mm
角度	6.5度

Q2カスタマイズキーボード概要

Mac

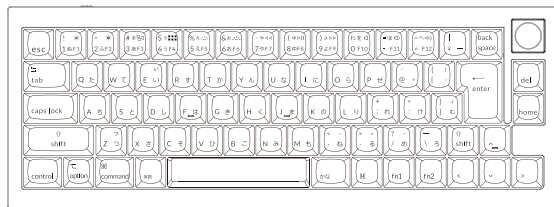


Windows

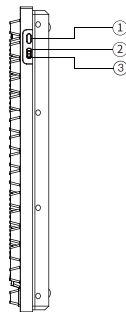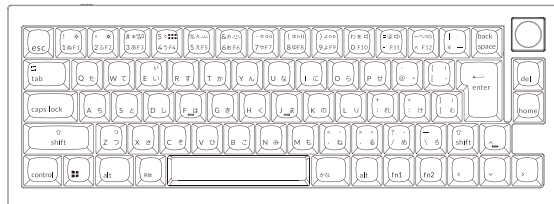


- ① Type-C ポート
- ② Mac レイアウト
- ③ Windows レイアウト

デフォルト・キーレイアウト:

レイヤー0: キーボードのシステムトグルがMacの場合に有効になります。

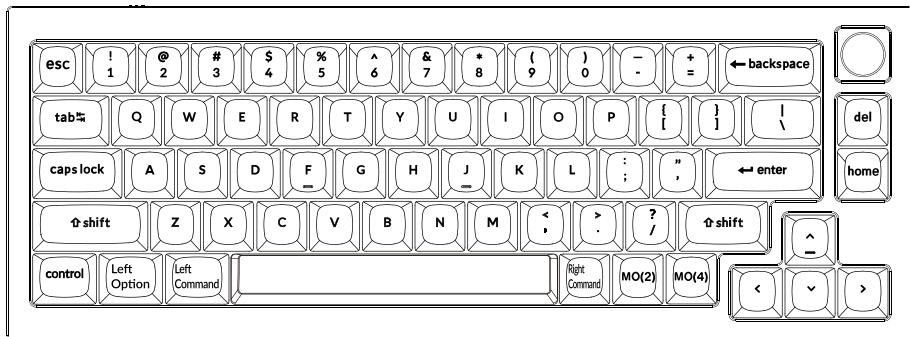


レイヤー1:キーボードのシステムトグルがWindowsの場合に有効になります。

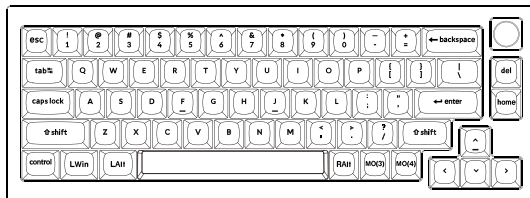


LAlt = Left Alt LWin = Left Windows RAlt = Right Alt


レイヤー2:キーボードのシステムトグルがMacで、fn1/MO(2)キーを押した場合に有効になります。

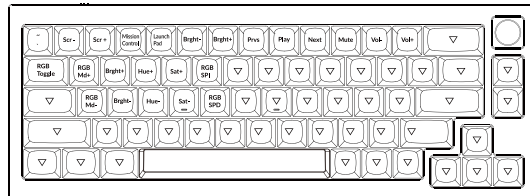

レイヤー3:キーボードのシステムトグルがWindowsで、fn1/MO(3)キーを押した場合に有効になります。

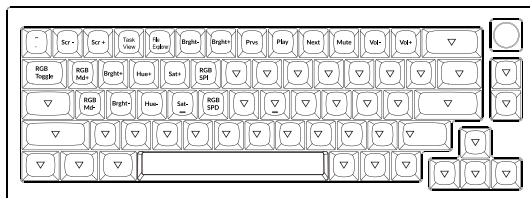

レイヤー 4 :fn2/MO(4)キーを押した場合に有効になります。

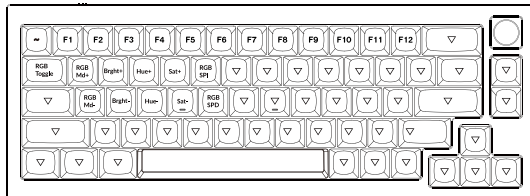

キー説明

キー説明	
Scr-	画面の輝度低下
Scr+	画面の輝度上昇
Bright-	バックライト低下
Bright+	バックライト上昇
Prvs	戻る
Play	再生/停止
Next	進む
Mute	ミュート
Vol-	音量低下
Vol+	音量上昇
RGB Toggle	バックライトON/OFF
RGBMd+	RGBモード進む

キー説明	
RGBMd-	RGBモード戻る
Hue+	色相上昇
Hue-	色相低下
RGB SPI	RGB速度上昇
RGB SPD	RGB速度低下
MO(1)	このキーを押した場合、レイヤー1が有効になります。
MO(2)	このキーを押した場合、レイヤー2が有効になります。
MO(3)	このキーを押した場合、レイヤー3が有効になります。
MO(4)	このキーを押した場合、レイヤー4が有効になります。

サードパーティの入力ツールとの互換性がありません

Windows / Android OSの互換性、バージョン、ブランド、ドライバにより、キーボードの使用中にサードパーティの入力ツール機能が影響を受ける場合があります。システムとドライバが最新であることを確認してください。

特定のFnキーまたはマルチメディアキーがWindows / Androidモードで機能しない

Windows / Android OSの互換性、バージョン、ブランド、ドライバにより、機能しない場合があります。

安全上の注意：

事故を防ぐために、製品、付属品、および梱包部品を子供の手の届かない場所に保管してください。
腐食を避けるために、製品を乾燥した環境に保管してください。
キーボードとバッテリーの寿命を維持する為には、製品を-10度以下または50度以上の温度環境で使用、保管をしないでください。

Keychron, Inc.
Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

Support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China



Q2 CUSTOMIZABLE KEYBOARD USER MANUAL

Knob
Version

Fully Assembled Version

Keyboard

1x Fully Assembled Keyboard

Including

1x Aluminum Case

1x PCB

1x Steel Plate

1x Sound Absorbing Foam

1x Case Foam

12x Gaskets (8 Installed and 4 in the Box)

4 Sets x Stabilizers

1 Set x Keycaps (PBT Double-shot)

1 Set x Switches (Gateron G Pro)

Cable

1x Type-C to Type-C Cable

1x Type-A to Type-C Adapter



Tools

1x Switch Puller

1x Keycap Puller

1x Screwdriver

1x Hex Key

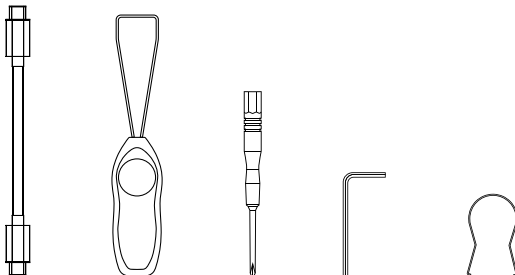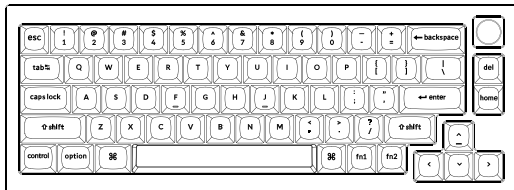

Barebone Version

Keyboard Kit

1x Keyboard Kit (Without Keycaps & Switches)

Including

1x Aluminum Case

1x PCB


1x Steel Plate

1x Sound Absorbing Foam

1x Case Foam

12x Gaskets (8 Installed and 4 in the Box)

4 Sets x Stabilizers

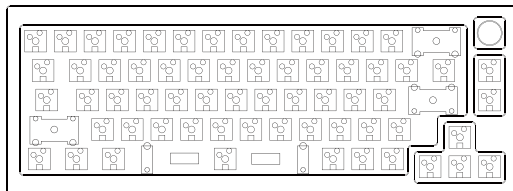

Cable

1x Type-C to Type-C Cable

1x Type-A to Type-C Adapter


Tools

1x Switch Puller

1x Keycap Puller

1x Screwdriver


1x Hex Key

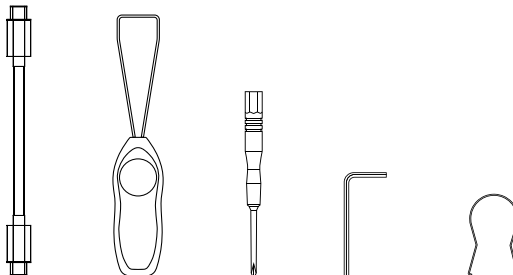

QUICK START GUIDE


If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

Mac / Windows

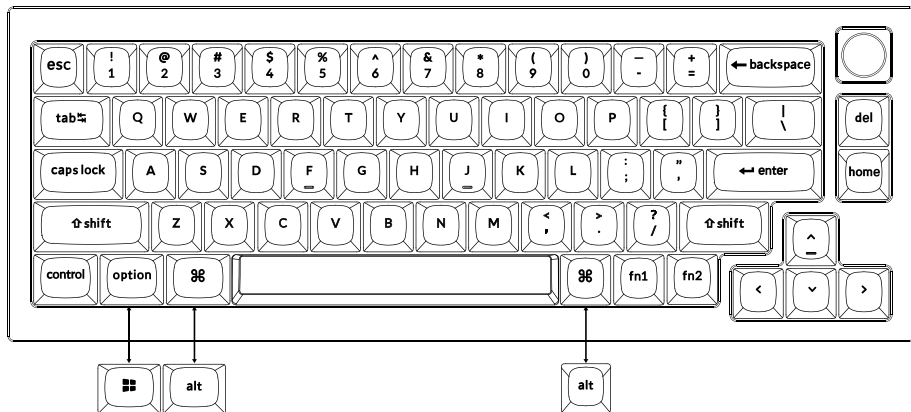

1 Switch To The Right System

Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.



2 The VIA Key Remapping Software

Please visit caniusevia.com to download the latest VIA software to remap the keys. If the VIA software cannot recognize your keyboard, please reach out to our support to get the instruction.



3 The Layers

There are five layers of key settings on the keyboard.


The layer 0 is for the Mac system.

The layer 1 is for the Windows system.

The layer 2 is for the Mac Multimedia keys.

The layer 3 is for the Windows Multimedia keys.


The layer 4 is for the Function keys.



If your system toggle is switched to Mac, then the layer 0 will be activated.




If your system toggle is switched to Windows, then the layer 1 will be activated.



4 Multimedia Key and Function Key

Multimedia keys



Function keys

F1 / F2 / F3 / F4 / F5 / F6 / F7 / F8 / F9 / F10 / F11 / F12

In order to get Multimedia Key, you need to press fn1 and



Key.


In order to get Function Key, you need to press fn2 and



Key.


5 The Backlight

Press fn1 + Q to change the lighting effect



fn1 + Q


Press fn1 + tab to turn the backlight on/off



fn1 + tab


6 Adjust The Backlight Brightness

Press fn1 + W to increase the backlight brightness



fn1 + W


Press fn1 + S to decrease the backlight brightness



fn1 + S


7 Adjust The Backlight Speed

Press fn1 + T to increase the light effect speed



fn1 + T

Press fn1 + G to decrease the light effect speed



fn1 + G

8 Warranty

The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.




9 Watch The Building Tutorial On Our Website

If you are building the keyboard for the first time, we highly recommend you watch the building tutorial video on our website first, then start building the keyboard yourself.



10 Factory Reset

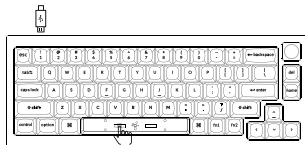

Troubleshooting? Don't know what's going on with the keyboard?


- ① Try factory reset by pressing fn1 +J +Z (for 4 seconds)
 - ② Download the right firmware for your keyboard from our website.
Remove the power cable from the keyboard.
 - ③ Remove the space bar keycap to find the reset button on the PCB.
 - ④ Hold the reset key while plugging in the power cable and then release the reset key. The keyboard now will enter DFU mode.
 - ⑤ Flash the firmware with the QMK Toolbox.
 - ⑥ Factory reset the keyboard again by pressing fn1 + J + Z (for 4 seconds)
- * Step by step guide can be found on our website

Q2 CUSTOMIZABLE KEYBOARD SPECIFICATIONS



Specifications	
Layout	65%
Switch type	Mechanical
Width	121 mm
Length	327.5 mm
Front height	20 mm (without keycaps)
Back height	33.8 mm (without keycaps)
Front height	33.6 mm (with OSA keycaps installed)
Back height	45.6 mm (with OSA keycaps installed)
Keyboard feet height	2.4 mm
Angle	6.5 degree

Q2 MECHANICAL KEYBOARD OVERVIEW

Mac

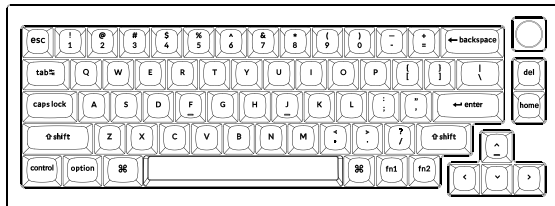


Windows

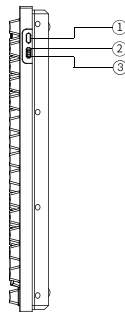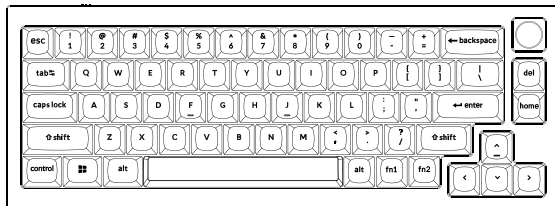


- ① Type-C Port
- ② Mac Layout
- ③ Windows Layout

DEFAULT KEY LAYOUT:

LAYER 0: This layer will be activated when your keyboard's system toggle is switched to Mac.

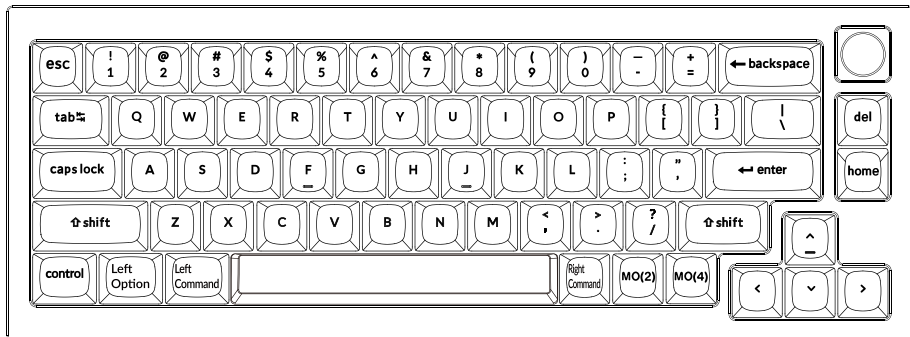


LAYER 1: This layer will be activated when your keyboard's system toggle is switched to Windows.

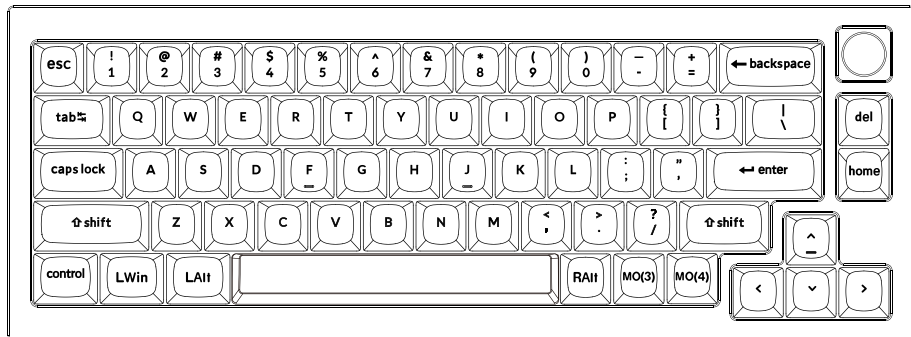


LAlt = Left Alt LWin = Left Windows RAlt = Right Alt


LAYER 2: This layer will be activated when your keyboard's system toggle is switched to Mac and press the fn1/MO(2) key.

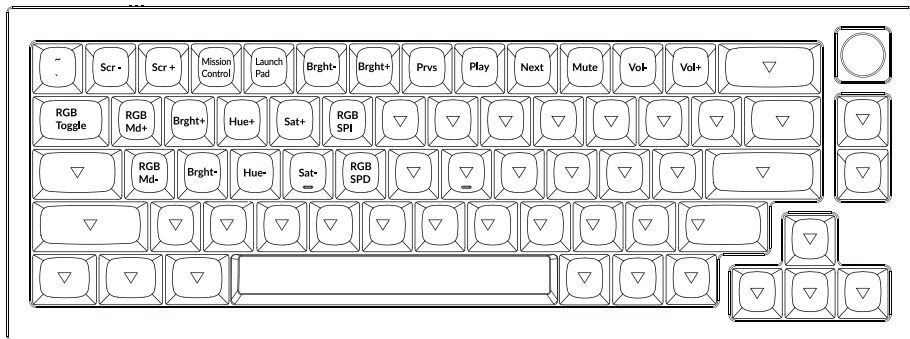

LAYER 3: This layer will be activated when your keyboard's system toggle is switched to Windows and press the fn1/MO(3) key.

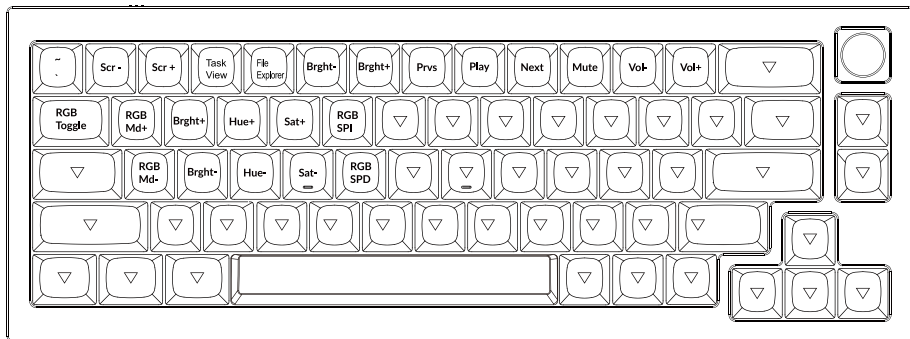

LAYER 4: This layer will be activated when you press the fn2/MO(4) key.

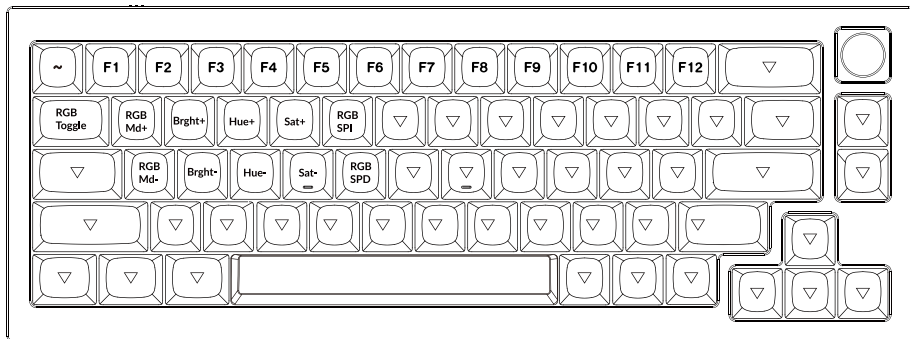

KEY DESCRIPTION

	Key Description
Scr-	Screen Brightness Decrease
Scr+	Screen Brightness Increase
Bright-	Backlight Decrease
Bright+	Backlight Increase
Prvs	Previous
Play	Play/Pause
Next	Next
Mute	Mute
Vol-	Volume Decrease
Vol+	Volume Increase
RGB Toggle	Turn Backlight on/off

	Key Description
RGBMd+	RGB Mode Next
RGBMd-	RGB Mode Previous
Hue+	Hue Increase
Hue-	Hue Decrease
RGB SPI	RGB Speed Increase
RGB SPD	RGB Speed Decrease
MO(1)	Layer 1 will be activated when holding this key
MO(2)	Layer 2 will be activated when holding this key
MO(3)	Layer 3 will be activated when holding this key
MO(4)	Layer 4 will be activated when holding this key

Third party input tools are not compatible with the keyboard.

Due to compatibility, versions, brands and drivers of Windows/macOS, functionalities of third Party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain fn keys or multimedia keys does not work under Windows/Android mode.

Functionalities of certain multimedia keys may be disabled due to compatibility, versions, brands and drivers of Windows/Android OS.

Safety Precaution:

Keep the product, accessories and packaging parts out of reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C (5°F) or above 50°C (131°F) to preserve the lifespan of the keyboard.

Keychron, Inc.
Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

Support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China