



V3 カスタマイズキーボード・ユーザーマニュアル

Knob
Version

組み立て済みバージョン

キーボード

1x 完全に組み立てられたキーボード

以下を含む

1x ケース

1x PCB

1x スチールプレート


1x 吸音材

1xシリコンボトムパッド

5セットxスタビライザー

1セットxキーキャップ

1セット x スイッチ

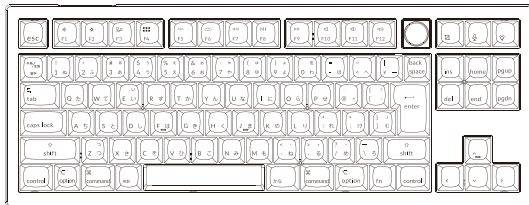

ケーブル

1x Type-C to Type-Cケーブル

1x Type-A to Type-Cアダプター


工具

1xスイッチプレー

1x キーキャッププラー

1x ネジ回し

1xヘックスキー

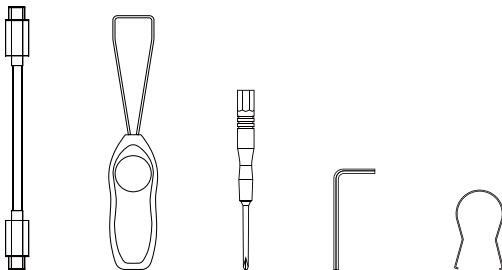

ベアボーン・バージョン

キーボードキット

1x キーボードキット

(キーキャップ、スイッチなし)

以下を含む

1x ケース


1x PCB

1x スチールプレート

1x 吸音材

1x シリコンボトムパッド

5セットx スタビライザー

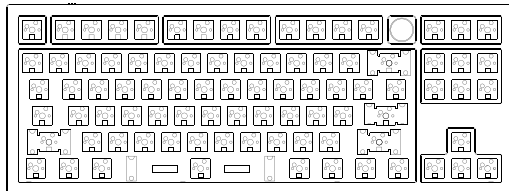

ケーブル

1x Type-C to Type-C ケーブル

1x Type-A to Type-C アダプター


工具

1x スイッチプラー

1x キーキャッププラー

1x ネジ回し


1x ヘックスキー

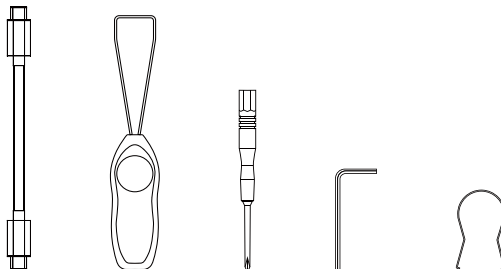

クイックスタートガイド


Windows をお使いの方は、付属のWindows 用キーキャップと交換してお使いください。

Mac / Windows

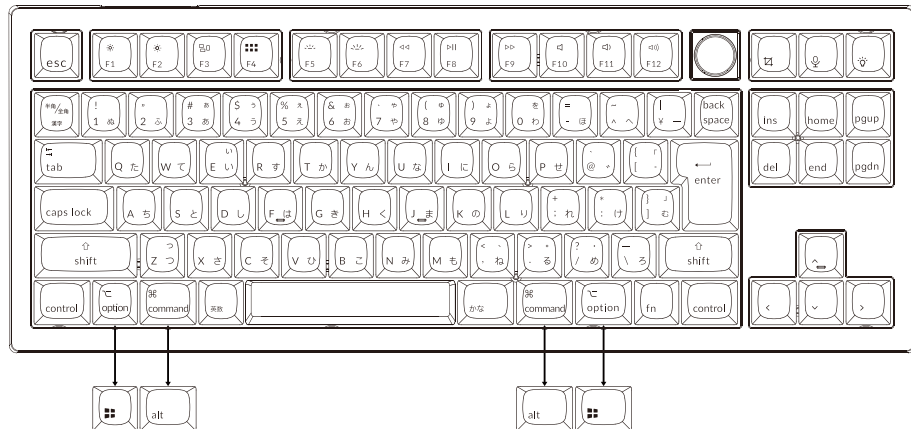

1 適切なシステムに切り替える

左上のシステムトグルが、
お使いのコンピューターのOSと
同じシステムに切り替わっている
ことを確認してください。



2 VIAキーリマップ・ソフトウェア

caniusevia.com にアクセスしてVIAソフトウェアを
ダウンロードして、キーのリマップを行います。
万が一、VIAソフトウェアがキーボードを認識しない
場合は、弊社サポートまでお問い合わせ下さい。




3 レイヤー

このキーボードのキー設定には4つのレイヤーがあります。レイヤー0とレイヤー1はMac用です。レイヤー2およびレイヤー3はWindows用です。


システムトグルがMacに切り替わってあれば、レイヤー0が有効になります。

システムトグルがWindowsに切り替わってあれば、レイヤー2が有効になります。よくあるお問い合わせとしまして、Windowsモードで使用する場合は、トップレイヤー（レイヤー0）ではなく、レイヤー2に対して変更を加えることにご注意ください。




4 バックライト

fn + Qを押してライトの効果を変更します。

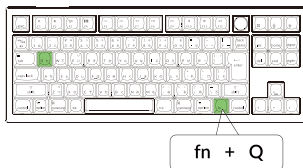


fn + tabを押してバックライトのON/OFFを変更します。

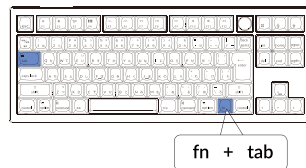


5 バックライトの明るさを調整

fn + W を押してバックライトを明るくします。

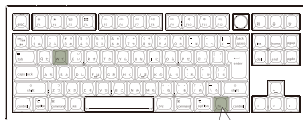

fn + W


fn + S を押してバックライトを暗くします。

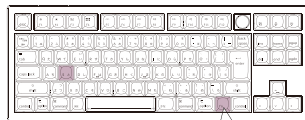

fn + S


6 バックライトスピード調整

fn + T を一緒に押してライトのスピードを速くします。



fn + T


fn + G を一緒に押してライトのスピードを遅くします。



fn + G


7 Siri / Cortanaの有効化

Siri (Mac): システム設定→Siri→ショートカット
※SiriはMacOSのみで動作し、iOSには対応していません。



Cortana: スタート→設定→Cortanaで
Windowsキー + Cキーを設定。

※CortanaはWindows10以上で動作し、地域によってはお使いいただけません。

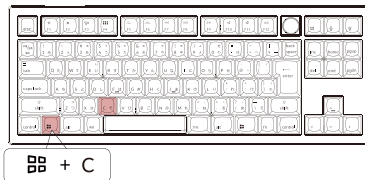

8 保証について

本キーボードはカスタマイズ性が高く、リビルドも容易です。
保証期間中にキーボードの部品に不具合が生じた場合、
キーボード全体ではなく、不具合のある部品のみを交換する
ご対応となります。




9 ウェブサイトで組み立てのチュートリアルを見る

もしキーボードの組み立てがはじめてであれば、keychronのウェブサイトにあるチュートリアルを見ることをおすすめ致します。その後にご自身で組み立てて下さい。

TUTORIAL

10 ファクトリーリセット

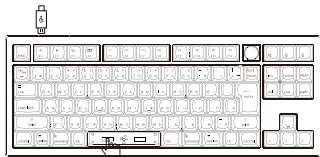

問題ですか？キーボードに不調がある場合は以下を試してみてください。

- ① fn + J + Z (4秒)を長押ししてファクトリーリセットしてみてください。
- ② 弊社ウェブサイトからファームウェアの更新がある場合は、適切なものインストールする。キーボードから電源ケーブルを外してみる。
- ③ スペースバーのキーキャップを外し、PCB上のリセットボタンからケーブルモードにしてみてください。
- ④ 電源ケーブルを挿入しリセットキーをホールドし、その後離してください。これでキーボードはDFUモードに入りました。
- ⑤ QMK Toolboxを使用しファームウェアを更新します。
- ⑥ fn + J + Z (4秒)を再度長押ししてファクトリーリセットをします。



V3カスタマイズキーボード仕様

仕様	
レイアウト	TKL
スイッチタイプ	メカニカル
幅	140.56mm
長さ	366.70mm
正面高さ	19.44mm(キーキャップ含まず)
	28.25mm(OSAキーキャップ)
背面高さ	26.83mm(キーキャップ含まず)
	37.03mm(OSAキーキャップ)
テンキー脚高さ	2mm
角度	3.5 / 7.26 / 9.69度

Diagram of a Mac keyboard layout. The keys are labeled with their respective symbols and functions:

- Top Row:** Command (⌘), Esc, F1, F2, F3, F4, F5, F6, F7, F8, F9, F10, F11, F12, Sleep, Mute, Volume Up, Volume Down.
- Second Row:** Command (⌘), Tab, Q, W, E, R, T, Y, U, I, O, P, [], \ /, Backspace.
- Third Row:** Command (⌘), Tab, Q, W, E, R, T, Y, U, I, O, P, [], \ /, Backspace.
- Fourth Row:** Command (⌘), Tab, Q, W, E, R, T, Y, U, I, O, P, [], \ /, Backspace.
- Fifth Row:** Command (⌘), Tab, Q, W, E, R, T, Y, U, I, O, P, [], \ /, Backspace.
- Sixth Row:** Command (⌘), Tab, Q, W, E, R, T, Y, U, I, O, P, [], \ /, Backspace.
- Seventh Row:** Command (⌘), Tab, Q, W, E, R, T, Y, U, I, O, P, [], \ /, Backspace.
- Eighth Row:** Command (⌘), Tab, Q, W, E, R, T, Y, U, I, O, P, [], \ /, Backspace.
- Ninth Row:** Command (⌘), Tab, Q, W, E, R, T, Y, U, I, O, P, [], \ /, Backspace.
- Tenth Row:** Command (⌘), Tab, Q, W, E, R, T, Y, U, I, O, P, [], \ /, Backspace.


Windows

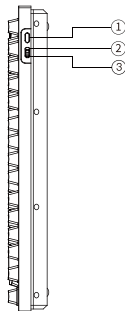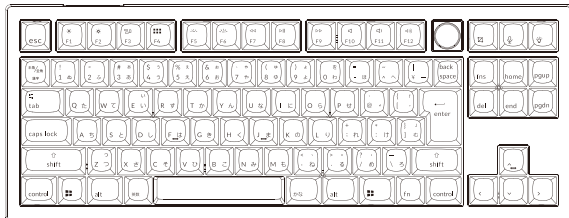


- 11

デフォルト・キーレイアウト:


レイヤー0: キーボードのシステムトグルがMacの場合に有効になります。

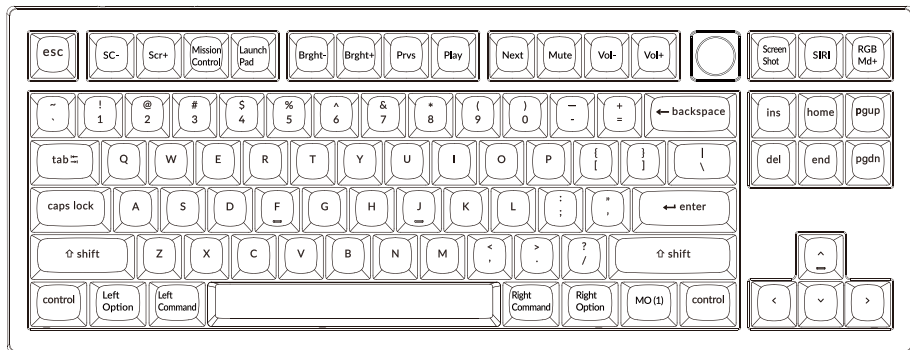

レイヤー1:キーボードのシステムトグルがMacで、fn/MO(1)キーを押した場合に有効になります。

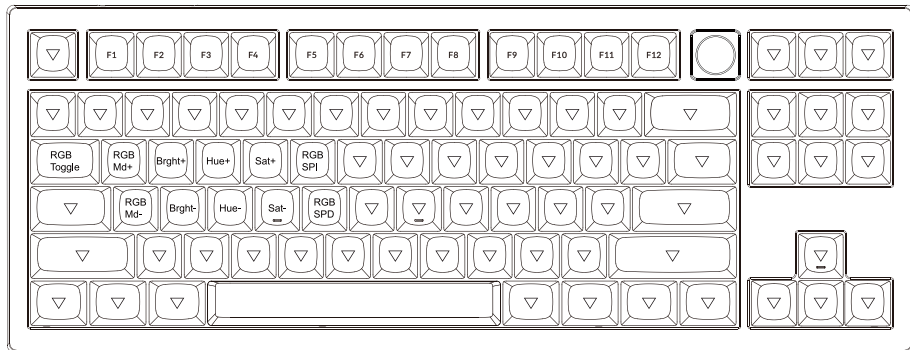


レイヤー2:キーボードのシステムトグルがWindowsの場合に有効になります。

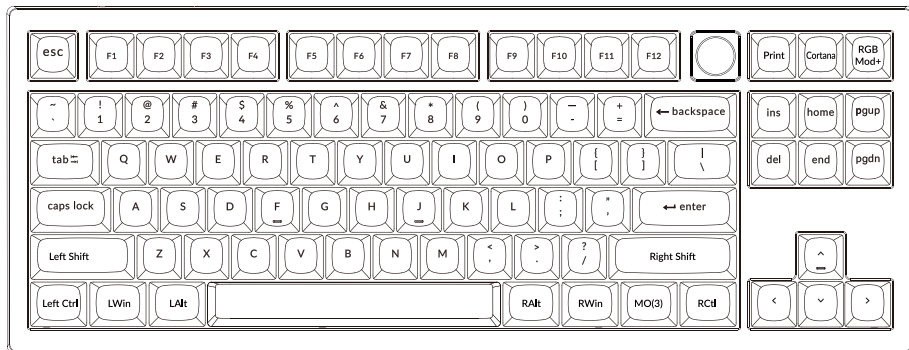

LWin = Left Windows LAlt = Left Alt RAlt = Right Alt RWin = Right Windows RCtrl = Right Ctrl

レイヤー3:キーボードのシステムトグルがWindowsで、fn/MO(3)キーを押した場合に有効になります。

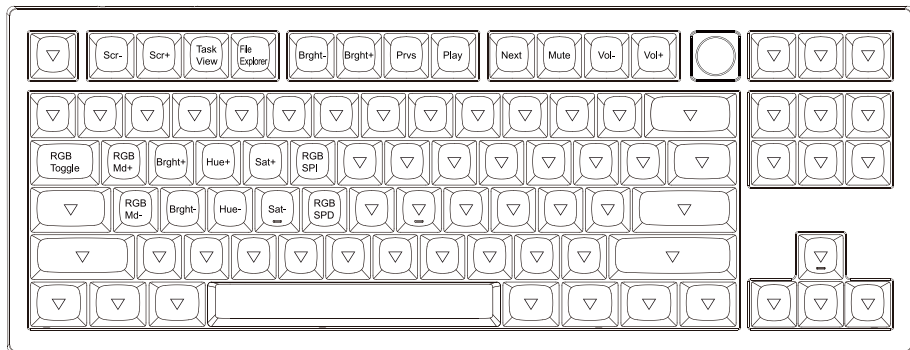

キー説明

キー説明	
Scr-	画面の輝度低下
Scr+	画面の輝度上昇
Bright-	バックライト低下
Bright+	バックライト上昇
Prvs	戻る
Play	再生/停止
Next	進む
Mute	ミュート
Vol-	音量低下
Vol+	音量上昇
RGB Toggle	バックライトON/OFF


キー説明	
RGBMd+	RGBモード進む
RGBMd-	RGBモード戻る
Hue+	色相上昇
Hue-	色相低下
RGB SPI	RGB速度上昇
RGB SPD	RGB速度低下
MO(1)	このキーを押した場合、レイヤー1が有効になります。
MO(2)	このキーを押した場合、レイヤー2が有効になります。
MO(3)	このキーを押した場合、レイヤー3が有効になります。
MO(4)	このキーを押した場合、レイヤー4が有効になります。

サードパーティーの入力ツールと互換性がありません

Windows / Android OSの互換性、バージョン、ブランドにより、キーボードの使用中にサードパーティーの入力ツール機能が影響を受ける場合があります。システムとドライバが最新であることを確認してください。

特定のマルチメディアキーまたはファンクションキーが機能しない

ご使用のデバイスの互換性、バージョン、ブランド、ドライバにより機能しない場合があります。

*Multimedia keys: 

Function keys: 

安全上の注意:

事故を防ぐために、製品、付属品、および梱包部品を子供の手の届かない場所に保管してください。
腐食を避けるために、製品を乾燥した環境に保管してください。
キーボードとバッテリーの寿命を維持する為には、製品を-10度以下または50度以上の温度環境で使用、保管をしないでください。

Keychron, Inc.
Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

Support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China



V3 CUSTOMIZABLE KEYBOARD USER MANUAL



Fully Assembled Version

Keyboard

1x Fully Assembled Keyboard

Including

1x Case

1x PCB

1x Steel Plate


1x Sound Absorbing Foam

1x Silicone Bottom Pad

5 Sets x Stabilizers

1 Set x Keycaps (PBT Double-shot)

1 Set x Switches

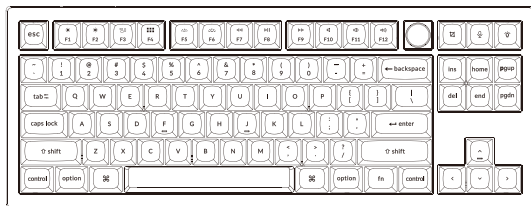

Cable

1x Type-C to Type-C Cable

1x Type-A to Type-C Adapter


Tools

1x Switch Puller

1x Keycap Puller

1x Screwdriver

1x Hex Key

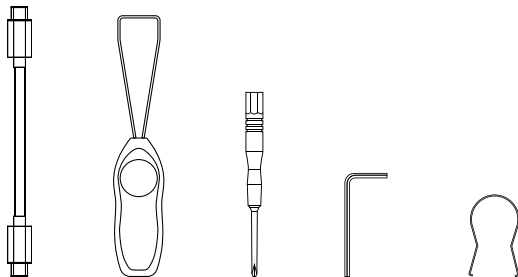

Barebone Version

Keyboard Kit

1x Keyboard Kit (Without Keycaps & Switches)

Including

1x Case


1x PCB

1x Steel Plate

1x Sound Absorbing Foam

1x Silicone Bottom Pad

5 Sets x Stabilizers

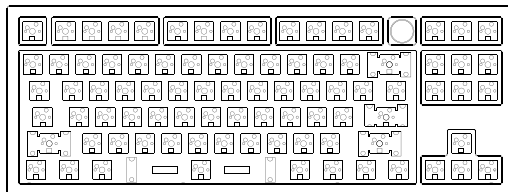

Cable

1x Type-C to Type-C Cable

1x Type-A to Type-C Adapter


Tools

1x Switch Puller

1x Keycap Puller

1x Screwdriver


1x Hex Key

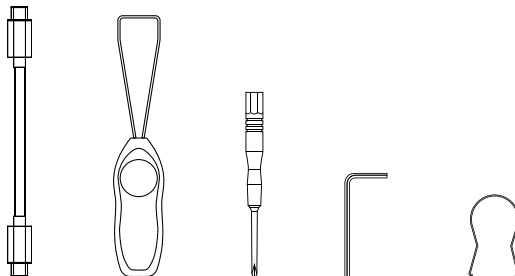

Quick Start Guide


If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

Mac / Windows

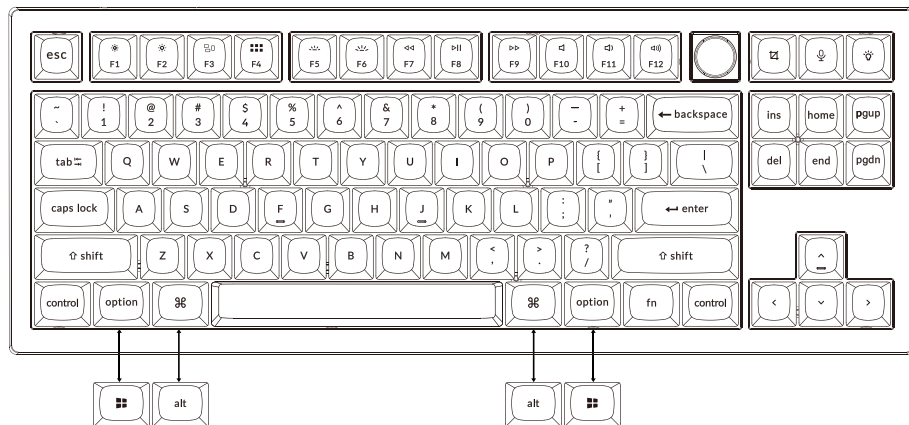

1 Switch To The Right System

Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.



2 The VIA Key Remapping Software

Please visit caniusevia.com to download the latest VIA software to remap the keys. If the VIA software cannot recognize your keyboard, please reach out to our support to get the instruction.





3 The Layers

There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.


If your system toggle is switched to Mac, then the layer 0 will be activated.

If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.




4 The Backlight

Press fn + Q to change the lighting effect

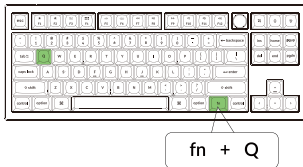


Press fn + tab to turn the backlight on/off

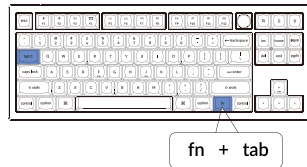

5 Adjust The Backlight Brightness

Press fn + W to increase the backlight brightness

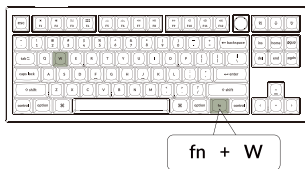


Press fn + S to decrease the backlight brightness



6 Adjust The Backlight Speed

Press fn + T to increase the light effect speed

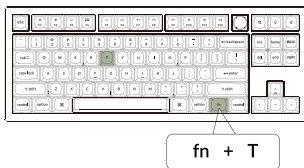

Press fn + G to decrease the light effect speed



7 Activate Siri / Cortana


For Siri on Mac: Go to System preferences > Siri > select "Hold Command Space" option.

*Siri key only works on macOS and does not work on iOS.



For Cortana on Windows: Select Start > Settings > Cortana and select the shortcut by pressing Windows key + C key.

*Windows Cortana is only available for Windows 10 and above OS. Cortana is only available in certain countries / regions and might not work everywhere.

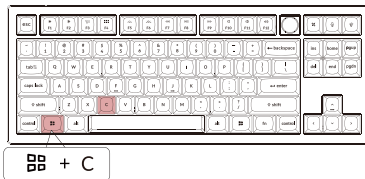

8 Warranty

The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.




9 Watch The Building Tutorial On Our Website

If you are building the keyboard for the first time, we highly recommend you watch the building tutorial video on our website first, then start building the keyboard yourself.



10 Factory Reset

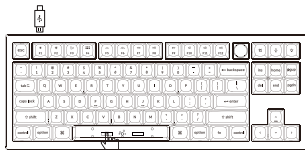

Troubleshooting? Don't know what's going on with the keyboard?


- ① Plug in the power cable and factory reset the keyboard by pressing $\text{fn} + \text{J} + \text{Z}$ (for 4 seconds).
 - ② Download the right firmware and QMK Toolbox from our website.
 - ③ Unplug the power cable and remove the space bar keycap to find the reset button on the PCB.
 - ④ Hold the reset key first, then plug in the power cable. Release the reset key, and the keyboard will now enter DFU mode.
 - ⑤ Flash the firmware with the QMK Toolbox.
 - ⑥ Factory reset the keyboard again by pressing $\text{fn} + \text{J} + \text{Z}$ (for 4 seconds).
- * Step by step guide can be found on our website.

V3 CUSTOMIZABLE KEYBOARD SPECIFICATIONS



Specifications	
Layout	TKL
Switch type	Mechanical
Width	140.56 mm
Length	366.70 mm
Front height	19.44 mm (without keycaps) 28.25 mm (with keycaps installed)
Back height	26.83 mm (without keycaps) 37.03 mm (with keycaps installed)
Keyboard feet height	2 mm
Angle	3.5 / 7.26 / 9.69 degree

V3 MECHANICAL KEYBOARD OVERVIEW

Mac

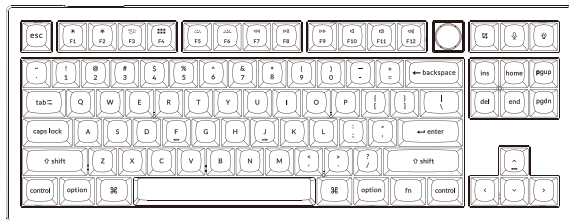


Windows

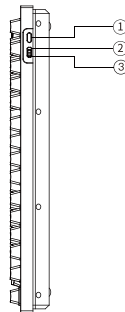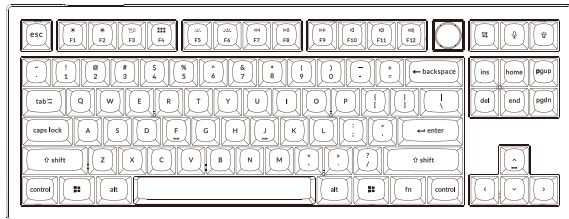


- ① Type-C Port
- ② Mac Layout
- ③ Windows Layout

DEFAULT KEY LAYOUT:


LAYER 0: This layer will be activated when your keyboard's system toggle is switched to Mac.

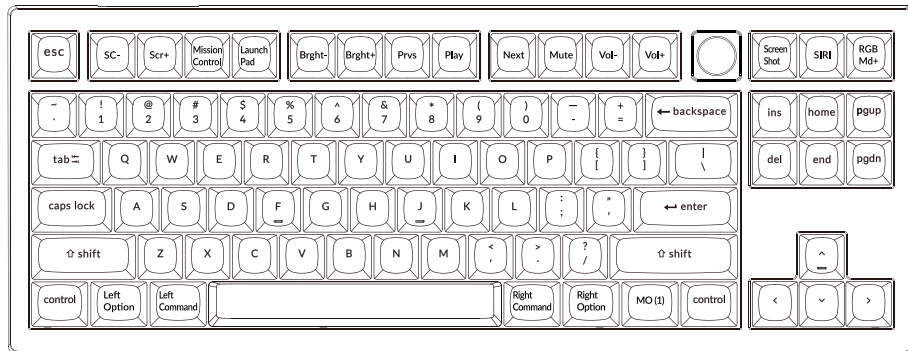

LAYER 1: This layer will be activated when your keyboard's system toggle is switched to Mac and press the fn/MO(1) key.

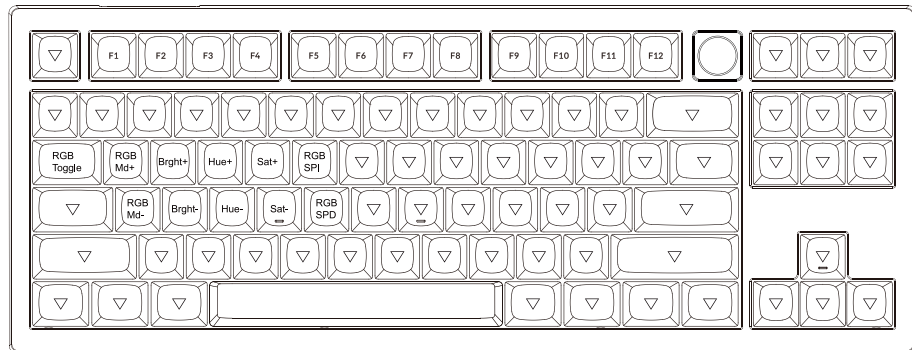


LAYER 2: This layer will be activated when your keyboard's system toggle is switched to Windows.

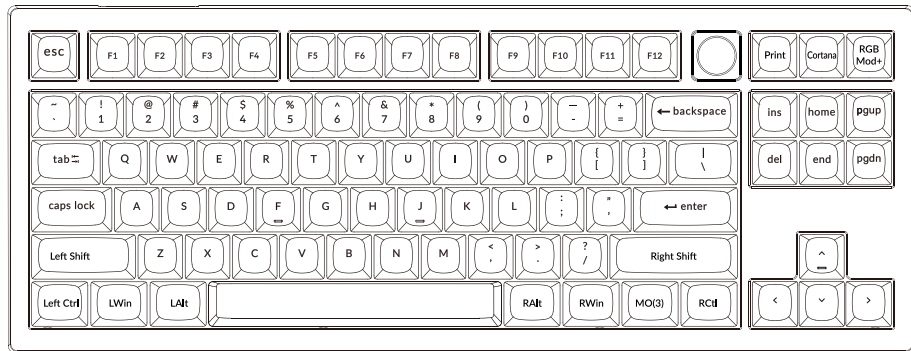

LWin = Left Windows LAlt = Left Alt RAlt = Right Alt RWin = Right Windows RCtrl = Right Ctrl

LAYER 3: This layer will be activated when your keyboard's system toggle is switched to Windows and press the fn/MO(3) key.

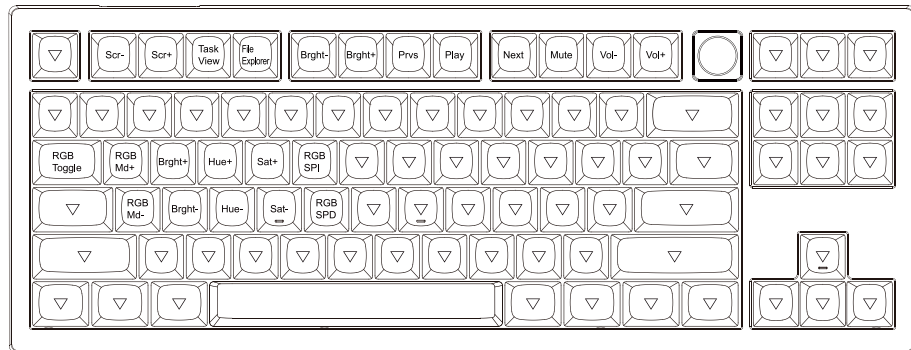

KEY DESCRIPTION

Key Description	
Scr-	Screen Brightness Decrease
Scr+	Screen Brightness Increase
Bright-	Backlight Decrease
Bright+	Backlight Increase
Prvs	Previous
Play	Play/Pause
Next	Next
Mute	Mute
Vol-	Volume Decrease
Vol+	Volume Increase
RGB Toggle	Turn Backlight on/off

Key Description	
RGBMd+	RGB Mode Next
RGBMd-	RGB Mode Previous
Hue+	Hue Increase
Hue-	Hue Decrease
RGB SPI	RGB Speed Increase
RGB SPD	RGB Speed Decrease
MO(1)	Layer 1 will be activated when holding this key
MO(2)	Layer 2 will be activated when holding this key
MO(3)	Layer 3 will be activated when holding this key
MO(4)	Layer 4 will be activated when holding this key


Third-party input tools are not compatible with the keyboard.

Due to compatibility, versions, brands and drivers of Windows/macOS, functionalities of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain multimedia keys or function keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices.

*Multimedia keys:



Function keys:

F1 / F2 / F3 / F4 / F5 / F6 / F7 / F8 / F9 / F10 / F11 / F12

Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C(5°F) or above 50°C(131°F) to preserve the lifespan of the keyboard.

Keychron, Inc.
Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

Support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China