



Q15 Max ワイヤレス メカニカルキーボード

Knob
Version

組み立て済みバージョン

キーボード

1 x 完全に組み立てられたキーボード

内容物

1 x アルミニウムケース

1 x PCB

1 x PCプレート

1 x 吸音材

1 x IXPEフォーム

1 x PETフォーム

1 x ラテックスボトムパッド

1 x ボトムケースアコースティックフォーム


1 x ボトムケース PET フォーム

14 x ガスケット

3 セット x スタビライザー

1 セット x キーキャップ (PBT 片面昇華)

1 セット x スイッチ

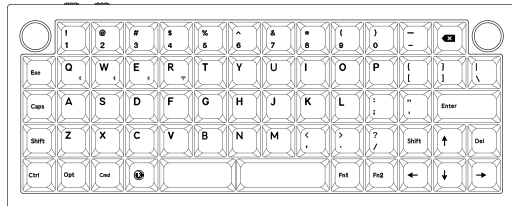

ケーブル

1 x Type-C to Type-C ケーブル

1 x Type-A to Type-C アダプター

1 x レシーバー用延長アダプター

レシーバー


1 x Type-A 2.4GHz レシーバー

工具

1 x キーキャップ & スイッチ プラー

1 x ネジ回し

1 x 六角レンチ

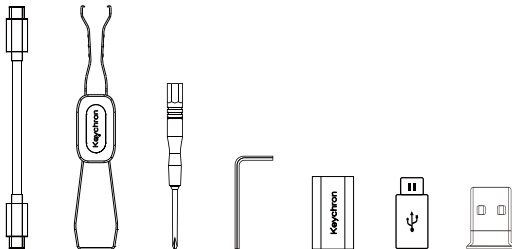

ベアボーン・バージョン

キーボード

1 x 完全に組み立てられたキーボード

内容物

1 x アルミニウムケース

1 x PCB

1 x PCプレート

1 x 吸音材

1 x IXPEフォーム

1 x PETフォーム


1 x ラテックスボトムパッド

1 x ボトムケースアコースティックフォーム

1 x ボトムケース PET フォーム

14 x ガスケット

3セット x スタビライザー

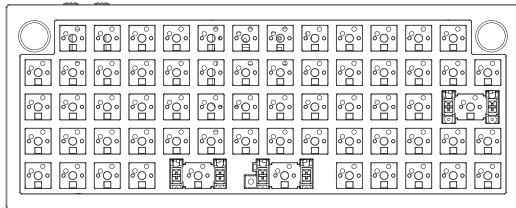

ケーブル

1 x Type-C to Type-Cケーブル

1 x Type-A to Type-Cアダプター

1 x レシーバー用延長アダプター

レシーバー


1 x Type-A 2.4GHzレシーバー

工具

1 x キーキャップ & スイッチプラー

1 x ネジ回し


1 x 六角レンチ

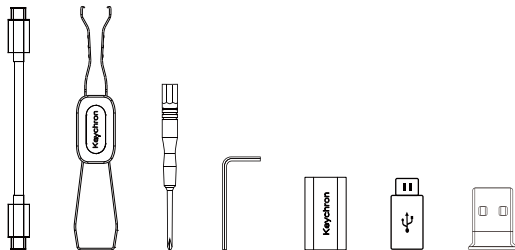

クイックスタートガイド


Windowsをお使いの方は、付属のWindows 用キーキャップと交換してお使いください。

Mac / Windows

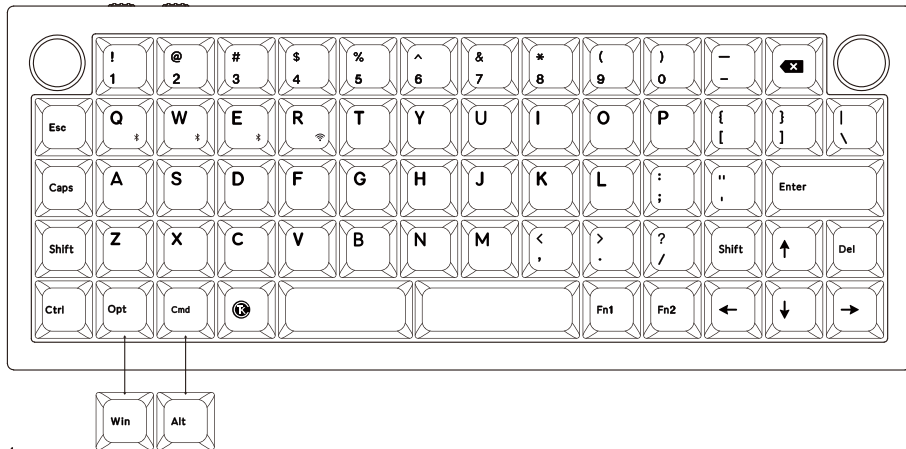


1 適切なシステムに切り替える

左上のシステムトグルが、お使いのコンピュータのOSと同じシステムに切り替わっていることを確認してください。




2 2.4GHzレーザー接続


2.4GHzレーザーを接続するデバイスのUSBポートに接続してください。



モード切替スイッチを2.4GHzに切り替えてください。




G = 2.4 GHz

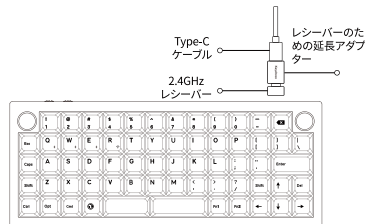


注：より良いワイヤレス体験のために、もしも2.4GHzレーザーとQ15 Maxとの距離がある場合はType-CケーブルとType-Cアダプターを使用して2.4GHzレーザーを接続して、テーブルのQ15 Maxキーボードの近くに置くと、遅延率が低くかつ信号干渉が少なくなります。


3 Bluetooth接続

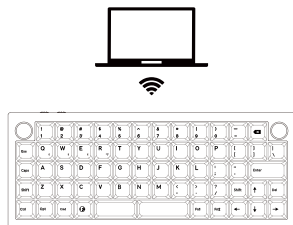


ボタンをBluetoothに切り替えてください。




Fn1キー + 1を4秒間押してQ15 Maxをデバイスとペアリングしてください。

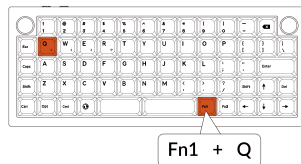

4 ケーブル接続




スイッチをケーブルに切り替えて下さい。




5 バックライト

Fn1 + A を押してバックライトの効果を変更します

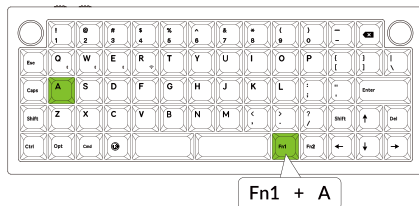


Fn1 + Caps を押してバックライトのon/offを変更します

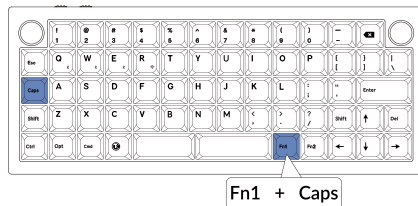


6 バックライトの明るさを調整

Fn1 + S を押してバックライトを明るくします

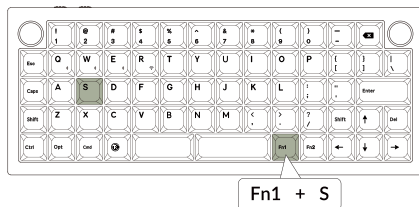


Fn1 + X を押してバックライトを暗くします

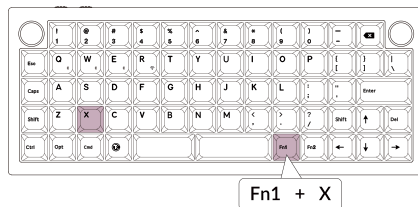


7 バックライトの速度を調整します

Fn1 + G を押してバックライトのスピードを速くします

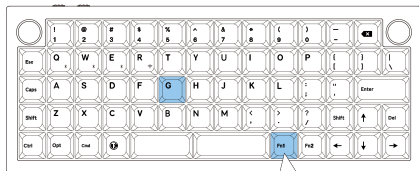

Fn1 + G


Fn1 + B を押してバックライトのスピードを遅くします

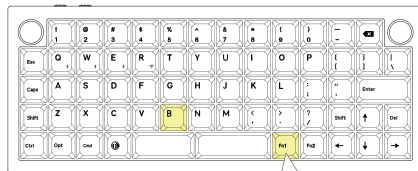

Fn1 + B

8 レイヤー


キーボードのキー設定は5レイヤーあります。
レイヤー0はMacシステム用。
レイヤー1はWindowsシステム用。
レイヤー2はMacのマルチメディアキー用。
レイヤー3はWindowsマルチメディアキー用。
レイヤー4はファンクションキー用。



システム・トグルがMacに切り替わっている場合、レイヤー0が有効になります。



システム・トグルがWindowsに切り替わっている場合、レイヤー1が有効になります。



9 Keychron Launcherアプリ

Keychronオンラインランチャーアプリをご使用の際は、launcher.keychron.comにアクセスしてください。

このアプリはキーのリマップ、キーの作動ポイントの調整、複数のコマンドを1つのキーに割り当てたり、ゲームコントローラーモードに入る設定があります(ご使用可能な設定はキーボードの種類により異なります)。

Keychron Launcherアプリが接続したキーボードを認識しない場合は、弊社サポートまでご連絡ください。サポートまでご連絡ください。



*オンラインKeychron Launcherアプリは最新バージョンのChrome、Edge、Operaブラウザでのみ動作します。

*オンラインKeychron Launcherアプリは、キーボードがコンピューターに有線で接続されている時のみ動作します。

10 ファクトリリセット & ファームウェアアップデート

トラブルシューティングについて、キーボードの調子が悪い場合は以下ご確認ください。


【ファクトリリセット】

1. キーボードの電源をONにします。
2. Fn2 + J + Zを同時に約4秒間長押しします。キーボードのバックライトが赤く約3秒間点滅したら、ファクトリリセットが実行されたことを示します。

【キーボードのファームウェアをフラッシュする】

1. launcher.keychron.comにアクセスし、オンラインKeychron Launcherアプリを開きます。
2. キーボードがケーブルまたは有線モードになっていることを確認し、電源ケーブルを差し込みます。
3. Keychron Launcherの左側にある「Firmware Update」タブを確認してキーボードを接続します。
4. Keychron Launcherより表示される案内に沿ってファームウェアのアップデートを完了します。

*詳細な手順は、keychron.comでキーワード「ファームウェア」を検索してください。

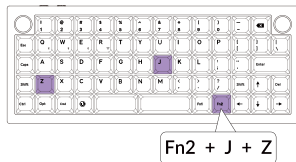

11 保証について

本キーボードはカスタマイズ性が高く、リビルドも容易です。
保証期間中にキーボードの部品に不具合が生じた場合、
キーボード全体ではなく、不具合のある部品のみを交換する
ご対応となります。



Q15 Max ワイヤレス メカニカルキーボード仕様

トータルキー数:66キー(US)

スイッチ:メカニカル

バッテリー: 4000mAh

ワイヤレス作動時間(RGB):最大100時間(最小輝度)

充電時間:約5時間

充電ポート:Type-C

モード:2.4GHz/ケーブル/Bluetooth



ワイヤレス有効距離:最大10メートル(オープンスペース)

Bluetooth デバイス名:Keychron Q15 Max

動作環境:-10~50℃

製品の仕様は予告なく変更になる場合があります。予めご了承ください。


Q15 MAX ワイヤレス メカニカルキーボード概要

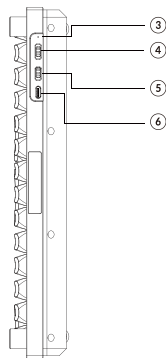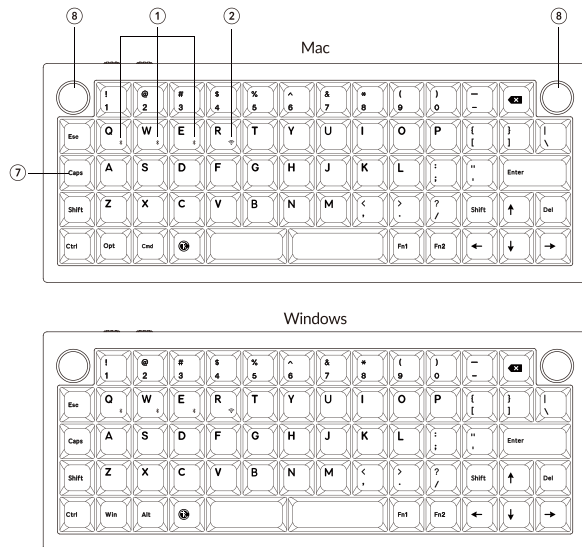


- ① Bluetoothインジケータ
- ② 2.4Gインジケータ
- ③ 充電インジケータ
- ④ G / Cable / BT (モード切替スイッチ)
- ⑤ Win/Android Mac/iOS(OS切替スイッチ)
- ⑥ Type-C ポート
- ⑦ Caps Lock Iインジケータ
- ⑧ ノブ

デフォルト・キーレイアウト:

レイヤー0:キーボードのシステムトグルがMACの場合に有効になります。

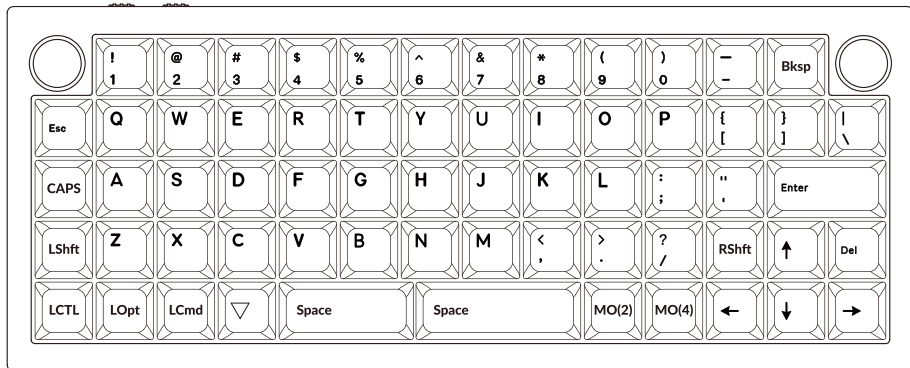


レイヤー1：キーボードのシステムトグルをWindowsに切り替えると、このレイヤーが有効になります。

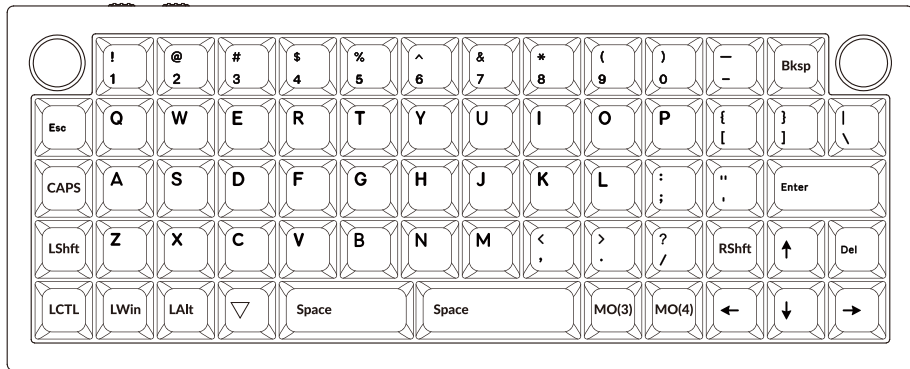


LShft=Left Shift LCTL=Left Ctrl LWin=Left Windows LAlt=Left Alt RShft=Right Shift


レイヤー2: キーボードのシステムトグルをMacに切り替え、Fn1/MO(2)キーを押すと、このレイヤーが有効になります。

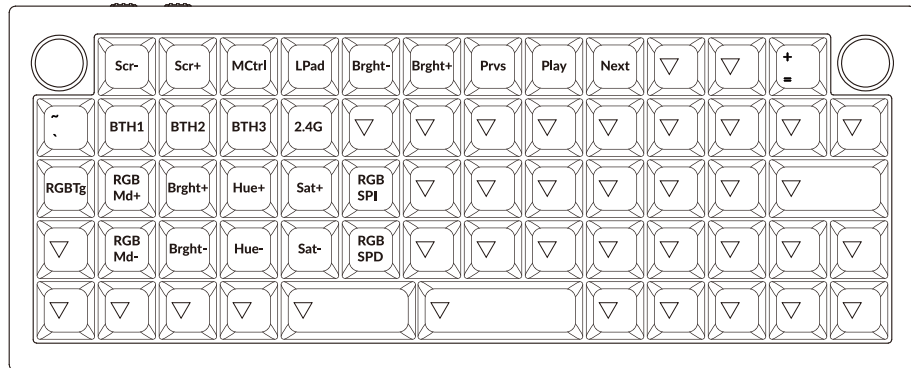

レイヤー3: キーボードのシステムトグルをWindowsに切り替え、Fn1/MO(3)キーを押すと、このレイヤーが有効になります。

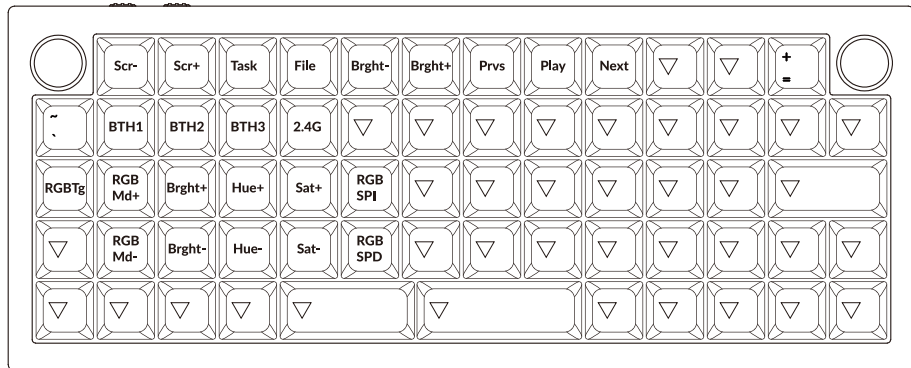

レイヤー4:Fn2/MO(4)キーを押すと、このレイヤーが有効になります。

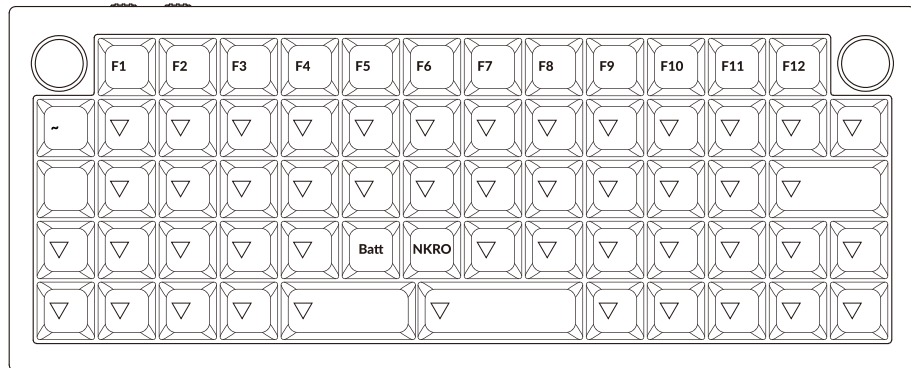

キー説明

キー説明		キー説明		キー説明	
Scr-	画面の輝度低下	RGB SPI	RGB速度上昇	NKRO	Nキーロールオーバー
Scr+	画面の輝度上昇	RGB SPD	RGB速度低下	Mctl	Mission Control
Bright-	バックライト低下	MO(2)	このキーを押した場合、レイヤー2が有効になります。	LPad	LaunchPad
Bright+	バックライト上昇	MO(3)	このキーを押した場合、レイヤー3が有効になります。		
Prvs	戻る	MO(4)	このキーを押した場合、レイヤー4が有効になります。		
Play	再生/停止	BTH1	Bluetoothホスト1		
Next	進む	BTH2	Bluetoothホスト2		
RGB Toggle	バックライトON/OFF	BTH3	Bluetoothホスト3		
RGBMd+	RGBモード進む	Sat+	彩度上昇		
RGBMd-	RGBモード戻る	Sat-	彩度低下		
Hue+	色相上昇	2.4G	2.4GHzホスト		
Hue-	色相低下	Batt	バッテリー残量		

LEDステータス概要

LED	機能	ステータス
パワー インジケータ	充電	充電中 - 赤く点灯 フル充電 - 緑に点灯
Bluetooth / 2.4GHz 帯インジケータ	Bluetooth / 2.4GHz帯	再接続 - 素早く点滅 ペアリング完了 - 消灯 ペアリング中 - ゆっくりと点滅
Caps Lock インジケータ	Caps Lock	Caps Lock有効 - ホワイトに点灯 Caps Lock無効 - 消灯

機能説明： 充電

ケーブルをUSBポートに差し込み、もう一方の端をキーボードのポートに差し込みます。電源インジケータ：

充電中は赤いランプが点灯したままになります。約5時間でフル充電され、緑のバッテリーインジケータが表示されます。電池残量が少なくなると、赤いランプが点滅します。

*Q15 Maxは全てのUSBポートと互換性があります。最高のパフォーマンスを得るには5V/1Aのアダプター、あるいはUSB3.0を使用してください。2.4GHz帯 / ケーブル(有線) / Bluetooth全てのモードで充電できます。

**この製品は最大5Vの充電電圧と1Aの充電電流に対応しております。不適切な充電によって引き起こされた問題については一切の責任を負いません。

2.4GHz / Bluetooth / ケーブルモード(モード切替スイッチ)

2.4GHzモード

1. 2.4GHzレシーバーを接続するデバイスのUSBポートに接続してください。
2. モード切替スイッチを2.4GHzに切り替えてください。本キーボードは自動的にご使用のデバイスと接続します。

有線モード

1. モード切替スイッチを「Cable」に切り替えてください(USBケーブルが接続されていない場合は無反応になります)。
2. ケーブルをデバイスとキーボードに接続してください。
3. バックライトが点灯します。

*有線モードの場合、節電モードにはなりません。

Bluetoothモード

1. モード切替スイッチをBluetoothに切り替えてください。
2. バックライトが点灯します。
3. "Fn1 + Q"キーを同時に4秒間長押ししてBluetoothペアリングをアクティブにします(ペアリングを検出するためにBluetoothインジケータが3分間高速点滅します)。
4. お使いのデバイスでBluetoothデバイス「Keychron Q15 Max」を検索し、接続します(ペアリングが成功するとBluetoothインジケータが消えます)。

注意:このキーボードは組み合わせキー"Fn1 + Q" / "Fn1 + W" / "Fn1 + E"で最大3台のデバイスのペアリング登録が出来ます。

*Bluetoothインジケータは3分間点滅します。

**Bluetoothのバージョンが異なるため、接続速度が遅い或いは失敗する可能性があります。すべての設定が正しく完了されたことを確認してください。

BLUETOOTHデバイスの切り替え

組み合わせキー「Fn1 + Q / Fn1 + W / Fn1 + E」を短く押し、デバイス、を切り替えます。

再接続:

1. キーボードをBluetoothの位置に切り替えてキーボードをアクティブにして下さい。(デフォルトではQ15 Maxは最後に接続したデバイスに接続します)
 2. Bluetoothインジケーターが4秒間点滅し、最後に接続したデバイスに接続します。
 3. Bluetoothインジケーターが消灯の場合、任意のボタンを押して、再度接続を行ってください。
- *この機能を実行するには、Q15 Maxが既にデバイスとペアリングされている必要があります。

キーボードの電源をOFFにする

モード切替スイッチを"Cable"にしてケーブルを取り外します。

バックライトの設定

- バックライトのオン/オフの切替は"Fn1" + "Caps"を短く同時に押します。
- バックライトの効果を変更する際は、"Fn1" + "A"もしくは"Fn1" + "Z"を短く押します。

OS切り替え

1 – MAC/iOS

Mac/iOSに接続している時は、スイッチをMac/iOSに切り替えます。

2 – WINDOWS/ANDROID

WindowsまたはAndroidに接続されている時は、スイッチをWindows/Androidに切り替えます。

*WindowsまたはAndroidモードの際は、「Windows」と「Alt」のファンクションキーとして使用されます。

トラブルシューティング

キーボードとデバイスがペアリングできない場合は、ペアリングしようとしているデバイスがBluetooth対応であることを確認してください。

対応の場合はデバイスを再起動し、もう一度キーボードとペアリングしてみてください。

注意: Windowsコンピュータでは、新しいBluetooth接続により、追加のソフトウェアを更新する場合があります。このプロセスは正常に完了したことを示すメッセージが表示された後も継続中な可能性があります。ペアリング後、少なくとも20分待って、すべてのアップデートが完了したことを確認してからコンピュータを再起動してください。

デバイスがBluetooth接続 (Windows) に対応し、外部キーボード (HIDプロファイル) をサポートしていることを確認してください。

Bluetoothデバイス>設定を開き、以下を選択します。

Bluetoothデバイスがコンピュータを検出できるようにする。

Bluetoothデバイスがこのコンピュータに接続できるようにします。

Bluetoothデバイスが接続を要求したときに通知する。

キーボードがBluetoothモードで動作しない。

お使いのコンピュータ / スマートフォン:

Bluetooth設定 > キーボードを選択して「接続解除」もしくは「このデバイスの登録を解除」を行ってください。

デバイスを再起動し、最初からBluetooth接続を行ってください。

お使いのキーボード:

キーボードの電源をOFFにしてから再びONにして、デバイスと再度接続してください。

キーボードが2.4GHzモードで動作しない場合

まずは、システム切替スイッチが2.4GHzに設定されていることを確認し、レシーバーをデバイスから取り外して"Fn1 + R"を4秒間同時に長押しして強制ペアリングを実行します。

キーボードがレシーバーから20cm以内にあることを確認して、再度レシーバーをデバイスに挿入してください。

ご使用環境によりワイヤレス接続は10メートル以内でも切断される場合がございます。


キーボードがBluetooth信号を妨害する可能性のある金属付近に置かれているかどうかを確認してください。

サードパーティーの入力ツールと互換性がありません

Windows / Android OSの互換性、バージョン、ブランドにより、キーボードの使用中にサードパーティーの入力ツール機能が影響を受ける場合があります。システムとドライバが最新であることを確認してください。

特定のマルチメディアキーまたはファンクションキーが機能しない

ご使用のデバイスの互換性、バージョン、ブランド、ドライバにより機能しない場合があります。

*Multimedia keys: 

Function keys: 

安全上の注意:

事故を防ぐために、製品、付属品、および梱包部品を子供の手の届かない場所に保管してください。
腐食を避けるために、製品を乾燥した環境に保管してください。

キーボードとバッテリーの寿命を維持する為には、製品を-10度以下または50度以上の温度環境で使用、保管をしないでください。

Keychron, Inc.
Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

Support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China



Q15 Max Wireless Mechanical Keyboard

Knob
Version

Fully Assembled Version

Keyboard

1x Fully Assembled Keyboard

Including

1x Aluminum Case

1x PCB

1x PC Plate

1x Sound Absorbing Foam

1x IXPE Foam

1x PET Film

1x Latex Bottom Pad

1x Bottom Case Acoustic Foam


1x Bottom Case PET Film

14x Gaskets (12 Installed and 2 in the Box)

3 sets x Stabilizers

1 set x Keycaps (PBT Single-Sided Sublimation)

1 set x Switches

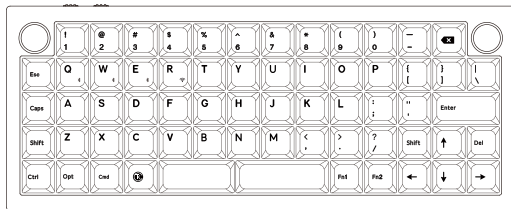

Cable

1x Type-C Cable

1x Type-A to Type-C Adapter

1x Extension Adapter for Receiver

Receiver


1x Type-A 2.4 GHz Receiver

Tools

1x Keycap & Switch Puller

1x Screwdriver

1x Hex Key

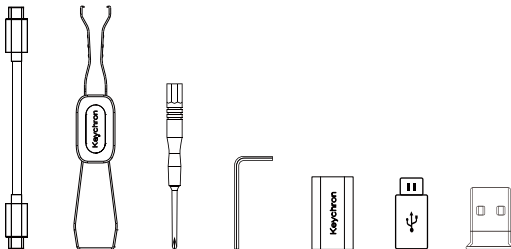

Barebone Version

Keyboard Kit

1x Keyboard Kit (Without Keycaps & Switches)

Including

1x Aluminum Case

1x PCB

1x PC Plate

1x Sound Absorbing Foam

1x IXPE Foam

1x PET Film


1x Latex Bottom Pad

1x Bottom Case Acoustic Foam

1x Bottom Case PET Film

14x Gaskets (12 Installed and 2 in the Box)

3 sets x Stabilizers

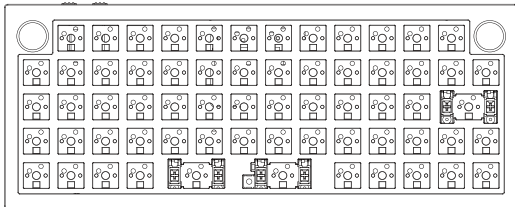

Cable

1x Type-C Cable

1x Type-A to Type-C Adapter

1x Extension Adapter for Receiver

Receiver


1x Type-A 2.4 GHz Receiver

Tools

1x Keycap & Switch Puller

1x Screwdriver


1x Hex Key

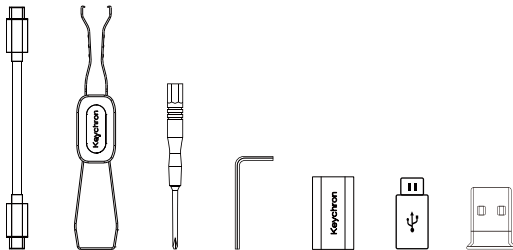

Quick Start Guide


If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

Mac / Windows

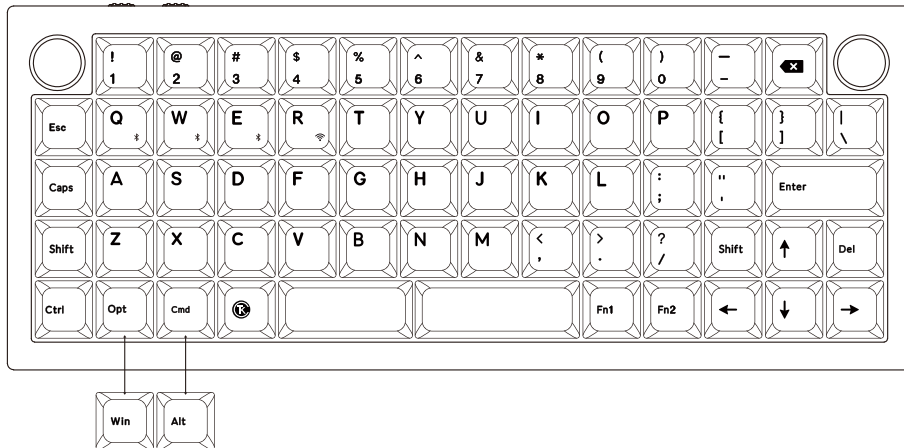

1 Switch To The Right System

Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.




2 Connect 2.4 GHz Receiver



Connect the 2.4 GHz receiver to the device USB port.



Switch toggle to 2.4 GHz mode




G = 2.4 GHz

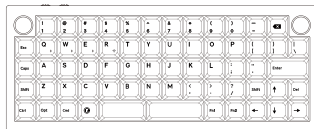


Note: For the best wireless experience, we recommend using the extension adapter for receiver and putting the 2.4 GHz receiver somewhere on your desk close to your keyboard for a low rate of latency and fewer signal interferences.


3 Connect Bluetooth

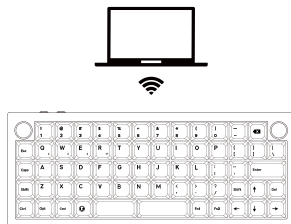


Switch toggle to Bluetooth




Press Fn1 + Q (for 4 seconds) and pair with device named Keychron Q15 Max

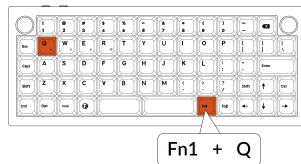

4 Connect Cable




Switch toggle to Cable




5 The Backlight

Press Fn1 + A to change the lighting effect

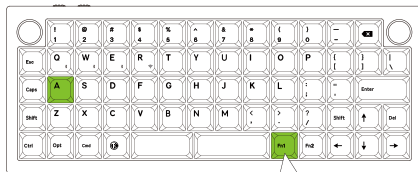

Fn1 + A


Press Fn1 + Caps to turn the backlight on/off

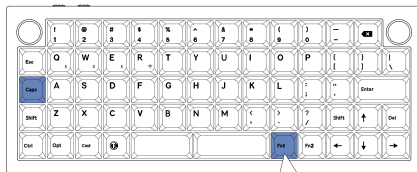

Fn1 + Caps


6 Adjust The Backlight Brightness

Press Fn1 + S to increase the backlight brightness

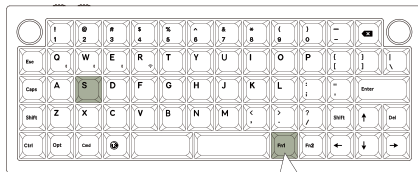

Fn1 + S


Press Fn1 + X to decrease the backlight brightness

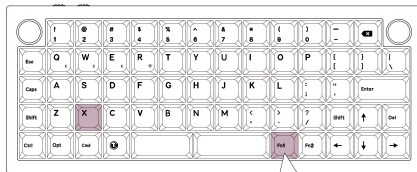

Fn1 + X


7 Adjust The Backlight Speed

Press Fn1 + G to increase the light effect speed

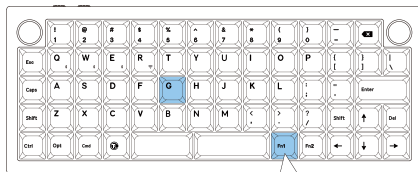

Fn1 + G


Press Fn1 + B to decrease the light effect speed

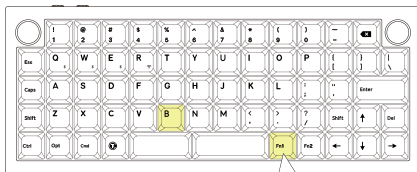

Fn1 + B

8 The Layers

There are five layers of key settings on the keyboard.
The layer 0 is for the Mac system.
The layer 1 is for the Windows system.
The layer 2 is for the Mac Multimedia keys.
The layer 3 is for the Windows Multimedia keys.
The layer 4 is for the Function keys.



If your system toggle is switched to Mac, then the layer 0 will be activated.



If your system toggle is switched to Windows, then the layer 1 will be activated.



9 The Keychron Launcher App

Please visit launcher.keychron.com to access the Keychron online launcher app. This app enables users to remap keys, adjust key actuation points, assign multiple commands to a single key, enter game controller mode, and more.


If it cannot recognize your keyboard, please reach our support to get instruction.



*The online launcher App can only run on the latest version of Chrome, Edge, and Opera browsers yet.

*The online launcher App only works when the keyboard is connected by wire to the computer.

10 Factory Reset & Firmware Update

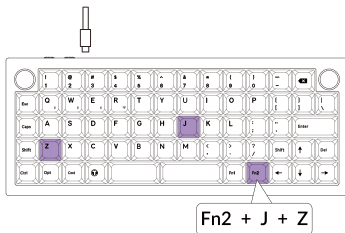

Troubleshooting? Don't know what's going on with the keyboard?

Factory reset your keyboard

1. Power on your keyboard.
2. Press and hold Fn2 + J + Z (for 4 seconds). The keyboard backlight will flash in red quickly for 3 seconds, indicating that the keyboard has been reset.

Flash your keyboard firmware

1. Visit launcher.keychron.com to open the online Launcher web app.
2. Ensure the keyboard is in Cable or Wired mode and plug in the power cable.
3. Find the 'Firmware Update' tab on the left side of the Launcher and connect your keyboard with it.
4. Follow the instructions on the Launcher and complete the firmware update.

*Step-by-step guide, search the keyword "firmware" on keychron.com.

11 Warranty

The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.



Q15 MAX WIRELESS MECHANICAL KEYBOARD SPECIFICATIONS

Number of keys: 66

Switch type: Mechanical

Battery: 4000mAh

Wireless working time (RGB): Up to 100 hours (lowest brightness)

Charging time: Around 5 hours

Charging port: Type-C

Mode: 2.4 GHz/ Cable / Bluetooth



Wireless operating distance: Within 10 meters (open space)

Name of Bluetooth device: Keychron Q15 Max

Operating environment: -10 to 50°C

Technical specifications can be subjected to change without notice, we apologize for any inconvenience caused.


Q15 MAX WIRELESS MECHANICAL KEYBOARD OVERVIEW

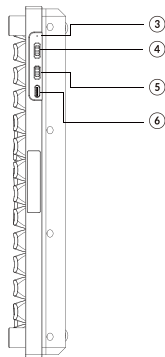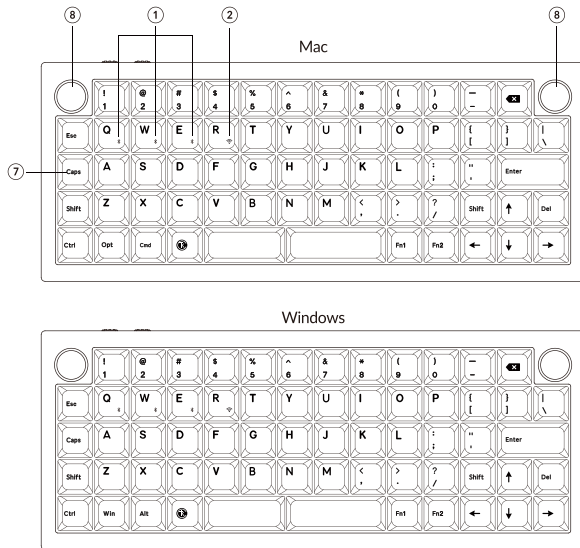


- 1 Bluetooth Indicator
- 2 2.4 GHz Indicator
- 3 Power Indicator
- 4 G Cable BT (Mode Toggle)
- 5 Win/Android Mac/iOS (OS Toggle)
- 6 Type-C Port
- 7 Caps Lock Indicator
- 8 Knob

DEFAULT KEY LAYOUT:

LAYER 0: This layer will be activated when your keyboard's system toggle is switched to Mac.

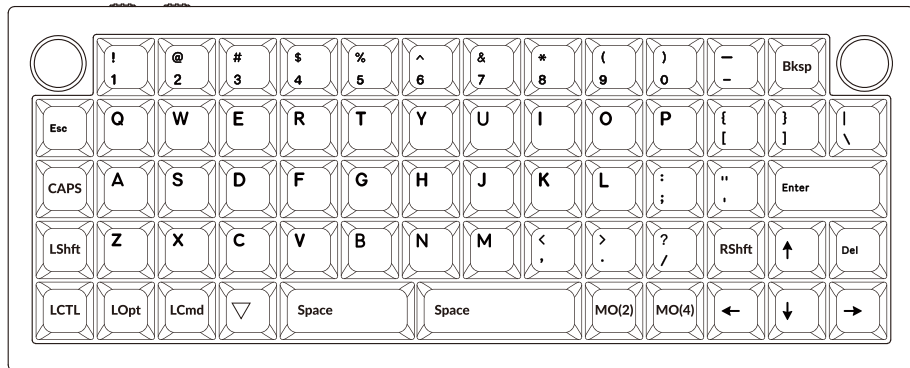


LAYER 1: This layer will be activated when your keyboard's system toggle is switched to Windows.

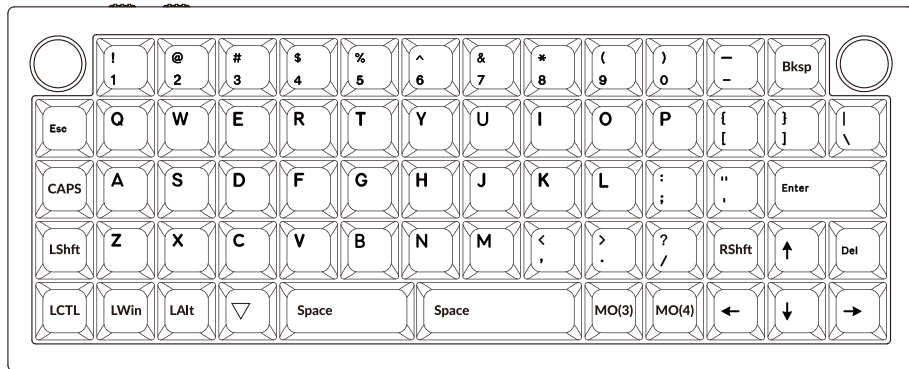


LShft=Left Shift LCTL=Left Ctrl LWin=Left Windows LAlt=Left Alt RShft=Right Shift


LAYER 2: This layer will be activated when your keyboard's system toggle is switched to Mac and press the Fn1/MO(2) key.

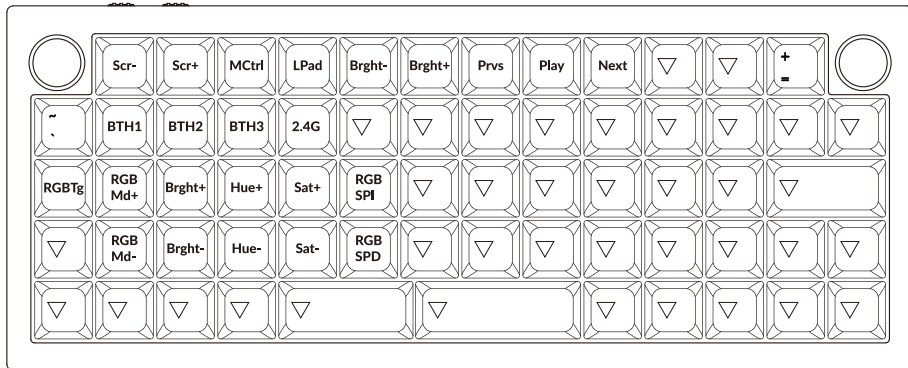

LAYER 3: This layer will be activated when your keyboard's system toggle is switched to Windows and press the Fn1/MO(3) key.

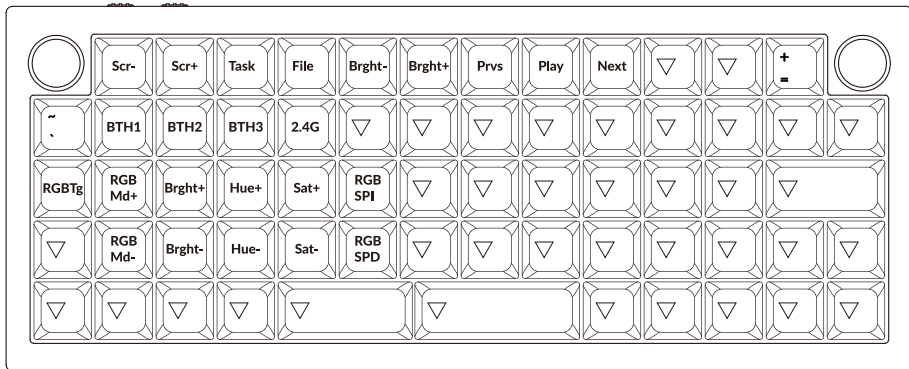

LAYER 4: This layer will be activated when you press the Fn2/MO(4) key.

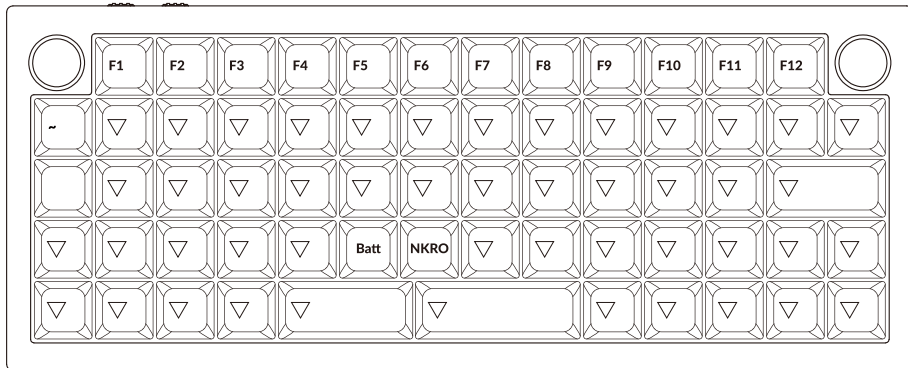

KEY DESCRIPTION

Key Description		Key Description		Key Description	
Scr-	Screen Brightness Decrease	RGB SPI	RGB Speed Increase	NKRO	N-key rollover
Scr+	Screen Brightness Increase	RGB SPD	RGB Speed Decrease	MCtl	Mission Control
Bright-	Backlight Decrease	MO(2)	Layer 2 will be activated when holding this key	LPad	LaunchPad
Bright+	Backlight Increase	MO(3)	Layer 3 will be activated when holding this key		
Prvs	Previous	MO(4)	Layer 4 will be activated when holding this key		
Play	Play/Pause	BTH1	Bluetooth Host 1		
Next	Next	BTH2	Bluetooth Host 2		
RGB Toggle	Turn Backlight on/off	BTH3	Bluetooth Host 3		
RGBMd+	RGB Mode Next	Sat+	Saturation Increase		
RGBMd-	RGB Mode Previous	Sat-	Saturation Decrease		
Hue+	Hue Increase	2.4G	2.4 GHz Host		
Hue-	Hue Decrease	Batt	Battery life		

LED STATUS OVERVIEW

LED Location	Function	Status
Power Indicator	Charging	Charging - Static Red Fully charged - Static Green
Bluetooth / 2.4 GHz Indicator	Bluetooth / 2.4 GHz	Reconnecting - Fast Blinking Paired - Light off Pairing - Slow Blinking
Caps Lock Indicator	Caps Lock	Enable / Caps Lock - Static White Disable / Caps Lock - Light Off

FUNCTION DESCRIPTION: CHARGING

Plug the cable into a USB port and plug the other end into the keyboard port. Power Indicator: A red light will stay on while charging; Fully charged in around 5 hours, a green battery indicator will appear. If the power is low, the red light will blink.

*The Keychron keyboard is compatible with all USB ports. Please use a 5V 1A adapter or USB 3.0 for the best performance. The Keychron Q15 Max can be charged in 2.4 GHz/Cable/Bluetooth mode.

**This product supports up to 5V charging voltage and 1A charging current. We are not responsible for any problems caused by improper charging.

2.4 GHZ / BLUETOOTH / WIRED MODE (MODE TOGGLE)

2.4 GHZ WIRED MODE

1. Connect the 2.4 GHz receiver to your device's USB Port.
2. Switch the toggle to the 2.4 GHz option. The keyboard will automatically connect to your device.

WIRED MODE

1. Switch the toggle to the Cable option (it only works when a USB cable is plugged in).
2. Connect our cable with your PC and keyboard.
3. Backlighting will be turned on.

*Under Wired Mode, keyboard will not enter into Battery Saver Mode.

BLUETOOTH MODE

1. Switch the toggle to the Bluetooth option.
2. Backlighting will be turned on.
3. Hold "Fn1+Q" key for 4 seconds to activate Bluetooth pairing (the Bluetooth indicator fast flashes for 3 minutes to detect pairing).
4. Search for the Bluetooth device "Keychron Q15 Max" on your device and connect it (the Bluetooth indicator goes off after successful pairing).

Note: This keyboard supports pairing up to 3 devices simultaneously via key combination "Fn1" + "Q" / "Fn1" + "W" / "Fn1" + "E".

**The Bluetooth indicator will continue to flash for 3 minutes.*

***Slow or failed connections may exist due to different Bluetooth versions, please make sure all the settings are correct.*

SWITCH BLUETOOTH DEVICES

Short press key combination "Fn1" + "Q" / "Fn1" + "W" / "Fn1" + "E" to switch to other device.

RECONNECT:

1. Switch the keyboard to the Bluetooth option to activate the keyboard.
2. The Bluetooth indicator flashes for 4 seconds and automatically pairs with the last paired device.
3. If the Bluetooth indicator is off, press any button to enter the connection again.

*The keyboard must have been paired with the device to perform this function.

TURN OFF THE KEYBOARD

Switch the keyboard to the Cable option and unplug the power cable.

BACKLIGHT SETTING

- Short press key combination "Fn1" + "Caps" or "Fn1" + "knob (press)" to turn the backlight on/off.
- Short press key combination "Fn1" + "A" / "Fn1" + "Z" to switch between different types of lighting effects.

OS TOGGLE SWITCH

1 – MAC/iOS

Switch the toggle to Mac/iOS when the keyboard is connected to a Mac or iOS operating system.

2 – WINDOWS/ANDROID

Switch the toggle to Windows/Android when the keyboard is connected to a Windows or Android operating system.

*When using the Windows/Android mode,   keys are used for "Windows" and "Alt" functions.

TROUBLESHOOTING

If unable to pair keyboard to device, confirm that the device you're trying to pair with is Bluetooth-capable. If so, restart the device and try pairing it with the keyboard again.

Note: On a Windows computer, a new Bluetooth connection will sometimes require additional software updates—a process that may still be ongoing after a message appears indicating a successful completion. Wait at least 20 minutes after pairing to make sure all updates are completed before restarting the computer.

Confirm that the device is configured to accept Bluetooth connections (Windows) and supports an external keyboard (HID profile).

Go to Bluetooth Devices > Open Settings and select the following:

Allow Bluetooth devices to find this computer

Allow Bluetooth devices to connect to this computer

Alert me when a Bluetooth device wants to connect

My keyboard isn't working in Bluetooth mode.

For the computer/smartphone:

Go to your device Bluetooth settings>Select the keyboard and remove/delete/unpair it.

Then restart your device.

For the keyboard:

Turn the keyboard off and back on. Then reconnect it to your device.

My keyboard isn't working in 2.4 GHz mode.

Ensure the toggle is set to 2.4 GHz, remove the receiver from your device, and press "Fn1" + "R" for 4 seconds to force pair, then reinsert the receiver into the device, keeping the keyboard within 20 cm of the receiver for optimal pairing.

Wireless connection is interrupted even within 10 meters.

Check if the keyboard is resting on a metal surface that can interfere with the wireless signal.

Third-party input tools are not compatible with the keyboard.

Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain multimedia keys or function keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices.

*Multimedia keys: 

Function keys: 

Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C(14°F) or above 50°C(122°F) to preserve the lifespan of the keyboard.

Keychron, Inc.

Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

Support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China